



B TYPE, BH TYPE

STANDARD SPECIFICATION SWITCHES

OUTLINES




Manual return and automatic return type

B-S,B,A,□

(H,K,V,T,F,E,G,J,O)
(305,306,307,308)

* The BY type has the same dimensions and shape. (Unit color: Blue)

(B type)

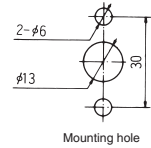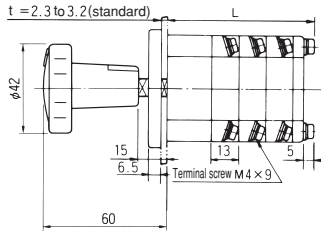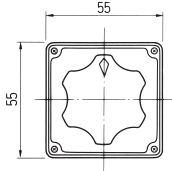

No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	43	56	69	82	95	108	121	134	147	160

* Max unit No. of the Automatic return type is 6 (12 contacts).
* Max. 6 contacts for one side.




Manual return and automatic return type

BH-S,B,A,□

(H,K,V,T,F,E,G,J,O)
(305,306,307,308)

* The BHY type has the same dimensions and shape. (Unit color: Blue)

(BH type)

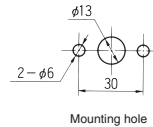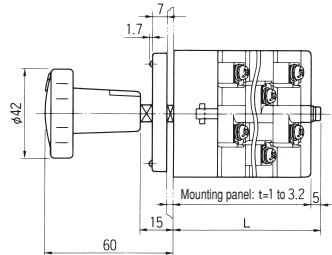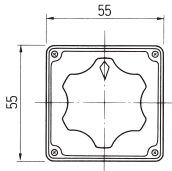




No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	43	56	69	82	95	108	121	134	147	160

* Max unit No. of the Automatic return type is 6 (12 contacts).
* Max. 6 contacts for one side.

Combination of manual and automatic return type

B-TR,TL,FR,FL,FS

(B type)

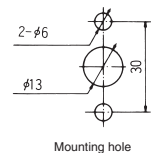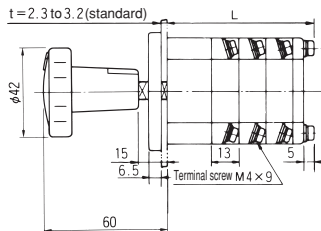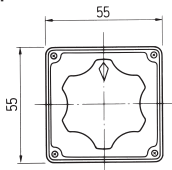


No. of units	1	2	3	4	5	6
L (mm)	43	56	69	82	95	108

Automatic return type by pulling

B-SB

(B type)

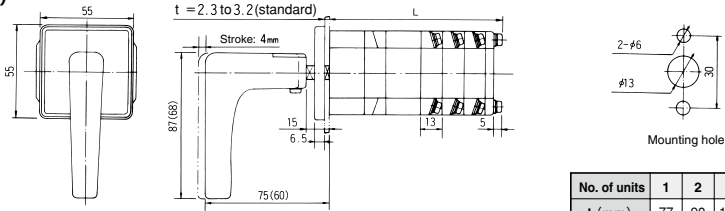


No. of units	1	2	3	4	5	6
L (mm)	77	90	103	116	129	142

Automatic return type by pulling

BHX-SB

(BH type)

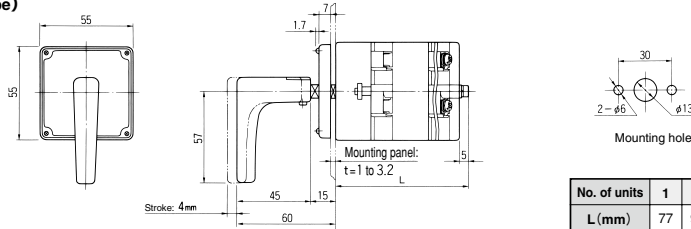


No. of units	1	2	3	4	5	6
L (mm)	77	90	103	116	129	142

Automatic or manual return type in axial direction

B-SQ,SR,SY

(B type)

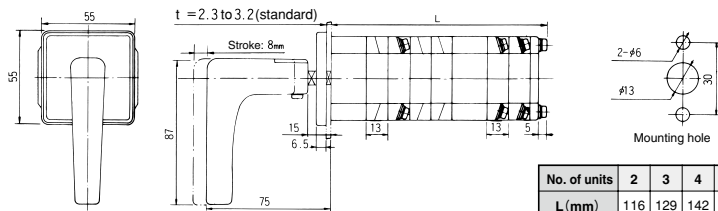


No. of units	2	3	4	5	6	7	8
L (mm)	116	129	142	155	168	181	194

Automatic return type by pulling and pushing

BHW-SQ,SR,BHX-SY

(BH type)

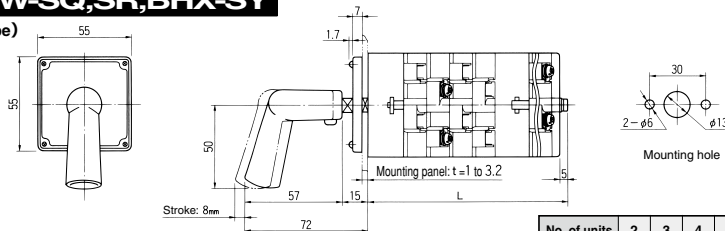

No. of units	2	3	4	5	6	7	8
L (mm)	116	129	142	155	168	181	194



B TYPE, BH TYPE


OUTLINES

Pulling lock and pushing lock type

B-SN, SM

* The handle returns to orepating position after pushing the lock release button.

(B type)

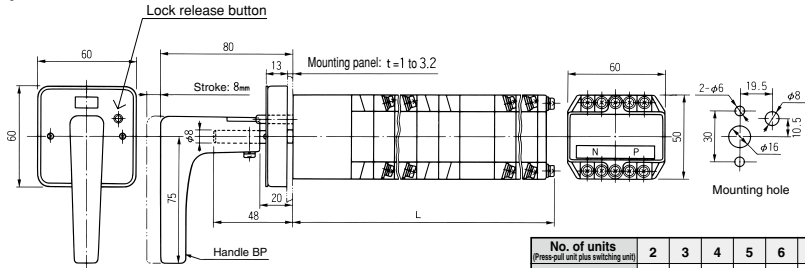

No. of units (Press-pull unit plus switching unit)	2	3	4	5	6	7	8
L (mm)	131	144	157	170	183	196	209


* The shaft shape is different from the basic one.
Please select a handle shape from page A6. (for pulling lock and pushing lock type)

Manual / Automatic axial return type

B-SUB, SUY (H, HB, HA, K, V, TB TA, T, F, E, G, J, O)

* A phrase in brackets insert to the blank.

(B type)

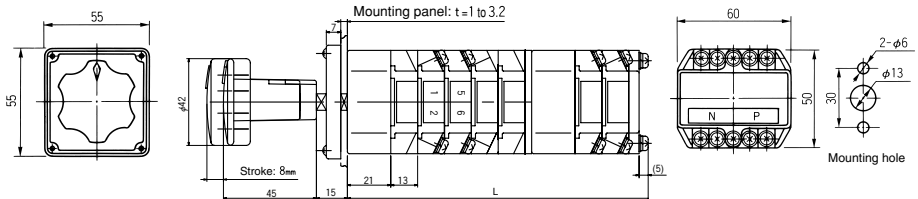


No. of units	2	3	4	5	6	7	8
L (mm)	119	132	145	158	171	184	197

Manual / Automatic axial return type

BHX-SUB, SUY (H, HB, HA, K, V, TB TA, T, F, E, G, J, O)

* A phrase in brackets insert to the blank.

(BH type)

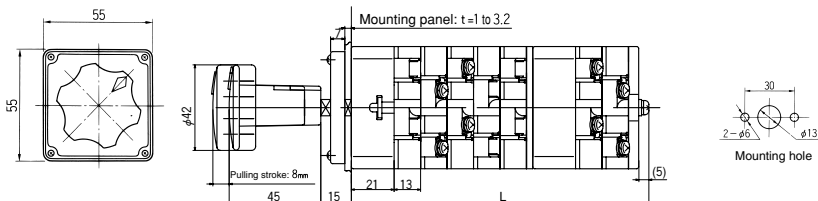


No. of units	2	3	4	5	6	7	8
L (mm)	119	132	145	158	171	184	197

Removable handle type

B-HC,TC,FC,SC

(B type)

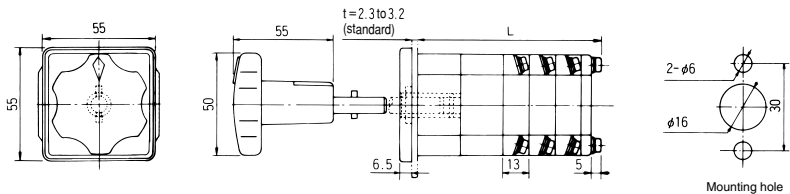


No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	64	77	90	103	116	129	142	155	168	181

* Max. unit No. of the automatic return type is 6 (12 contacts).

Removable handle type

BHK-HC,TC,FC,SC


(BH type)

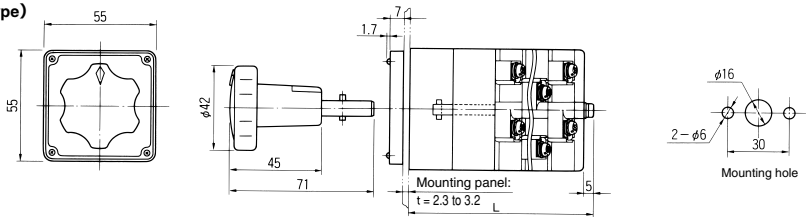

No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	64	77	90	103	116	129	142	155	168	181

■ Handle removal position

Removal position is selectable.
(More than one positions are available.)

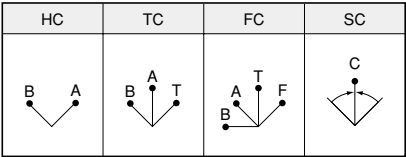


■ Key coding system (optional extra)

Key coding system is available as an option. Key combination numbers (KB1~4) are selectable, and same number combination of the handle and the body is operational.

Combination diagram	Key shaft	Body	Key shaft	Body	Key shaft	Body	Key shaft	Body
KB1	KB2	KB3	KB4	KB1	KB2	KB3	KB4	KB1
Key combination No.	KB1	KB2	KB3	KB4	Key combination No.	KB1	KB2	KB3

When the keyshaft and body are matching, it's possible to remove and insert of the key.

<Cross-section view>

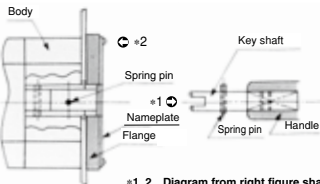

*1, 2 Diagram from right figure shape.




B TYPE, BH TYPE

OUTLINES

Dual body type

B-HW,TW,FW,EW


(B type)

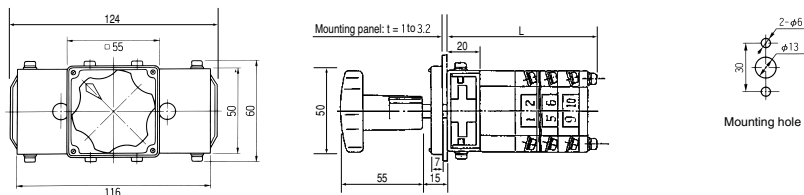

Dual body type

BH-HW,TW,FW,EW

(BH type)

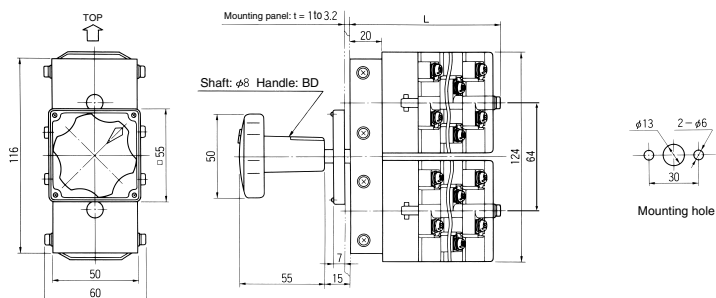

No. of stages	1	2	3	4	5	6	7	8	9
L (mm)	63	76	89	102	115	128	141	154	167

* Please select a handle shape from page A6. (for dual body type)