



CAM-OPERATED SWITCH

B TYPE, BH TYPE

STANDARD SPECIFICATION SWITCHES




OUTLINES

Manual return and automatic return type

B-S,B,A, (H,K,V,T,F,E,G,J,O)
(305,306,307,308)

* The BY type has the same dimensions and shape. (Unit color: Blue)

(B type)

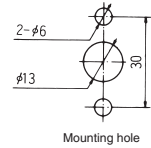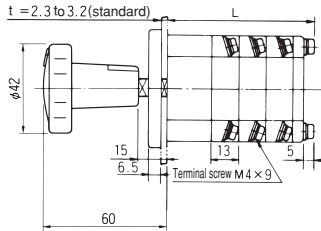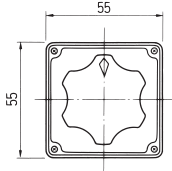

No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	43	56	69	82	95	108	121	134	147	160




* Max unit No. of the Automatic return type is 6 (12 contacts).
* Max. 6 contacts for one side.

Manual return and automatic return type

BH-S,B,A, (H,K,V,T,F,E,G,J,O)
(305,306,307,308)

* The BHY type has the same dimensions and shape. (Unit color: Blue)

(BH type)

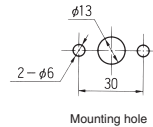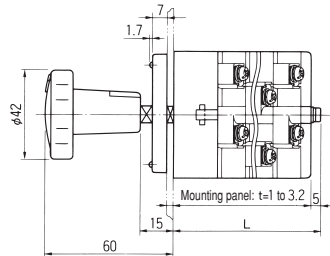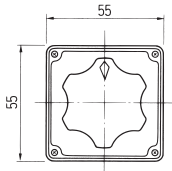




No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	43	56	69	82	95	108	121	134	147	160

* Max unit No. of the Automatic return type is 6 (12 contacts).
* Max. 6 contacts for one side.

Combination of manual and automatic return type

B-TR,TL,FR,FL,FS

(B type)

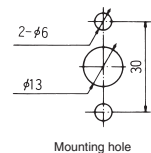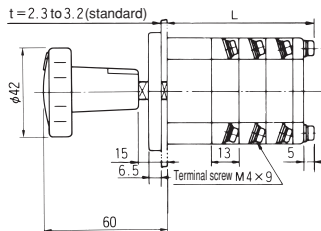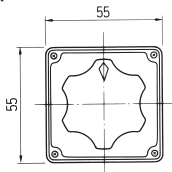


No. of units	1	2	3	4	5	6
L (mm)	43	56	69	82	95	108

Automatic return type by pulling

B-SB


(B type)

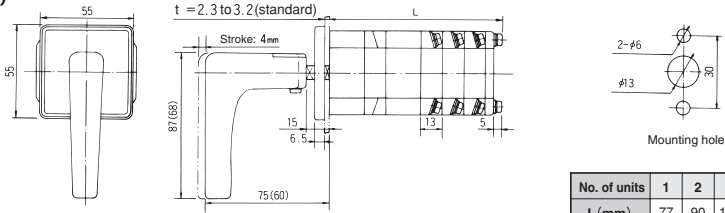

Automatic return type by pulling

BHX-SB


(BH type)

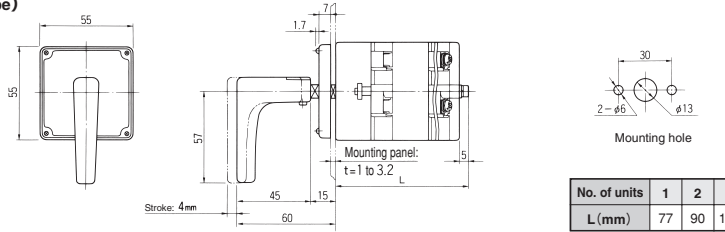

Automatic or manual return type in axial direction

B-SQ,SR,SY


(B type)

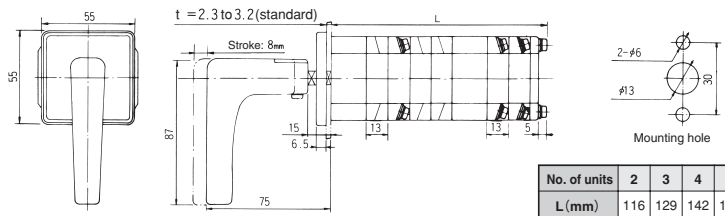

Automatic return type by pulling and pushing

BHW-SQ,SR,BHX-SY

(BH type)

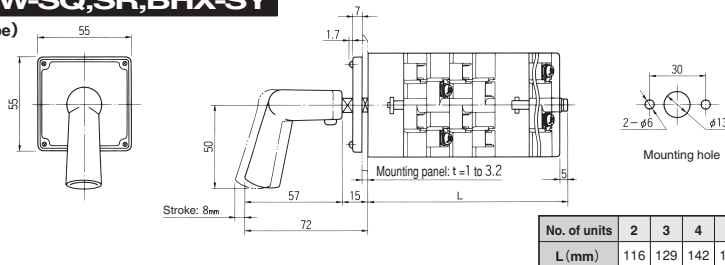



CAM-OPERATED SWITCH

B TYPE, BH TYPE

OUTLINES

Pulling lock and pushing lock type


B-SN, SM

(B type)

* For specific users.

B-SN: The handle returns to operating position after pushing the lock reset button.

B-SM: The handle returns to automatically lock position after pushing the lock reset button.

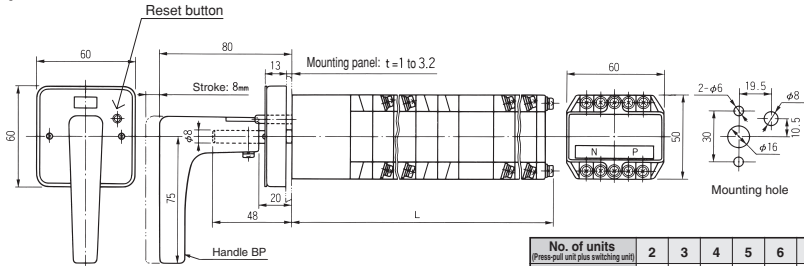

No. of units (Press-pull unit plus switching unit)	2	3	4	5	6	7	8
L (mm)	131	144	157	170	183	196	209

* The shaft shape is different from the basic one.


Please select a handle shape from page A6. (for pulling lock and pushing lock type)

Manual / Automatic axial return type

B-SUB, SUY (H, HB, HA, K, V, TB / TA, T, F, E, G, J, O)

(B type)

* A phrase in brackets insert to the blank.

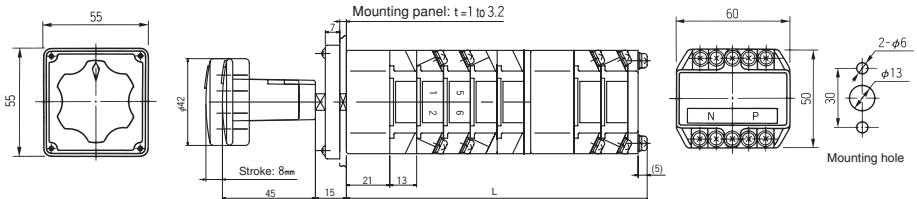


No. of units	2	3	4	5	6	7	8
L (mm)	119	132	145	158	171	184	197

Manual / Automatic axial return type

BHX-SUB, SUY (H, HB, HA, K, V, TB / TA, T, F, E, G, J, O)

(BH type)

* A phrase in brackets insert to the blank.

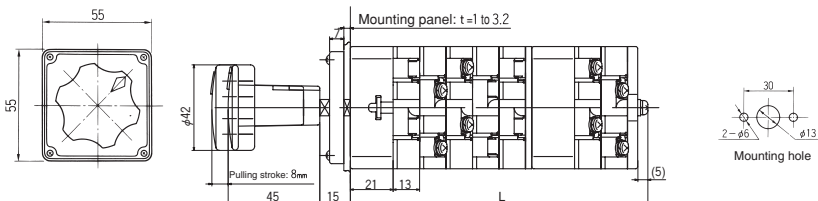


No. of units	2	3	4	5	6	7	8
L (mm)	119	132	145	158	171	184	197

Handle removable type

B-HC,TC,FC,SC

(B type)

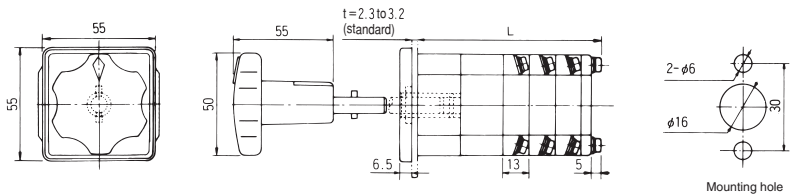


No. of units	1	2	3	4	5	6	7	8
L (mm)	64	77	90	103	116	129	142	155

※ Max. unit No. of the automatic return type is 6 (12 contacts).

Handle removable type

BHK-HC,TC,FC,SC


(BH type)

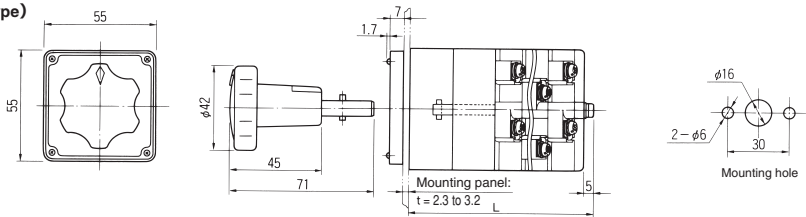

No. of units	1	2	3	4	5	6	7	8
L (mm)	64	77	90	103	116	129	142	155

■ Handle removal position

Removal position is selectable.
(More than one positions are available.)

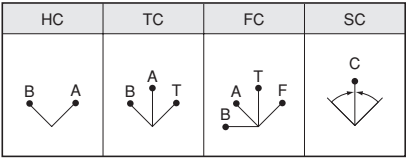


■ Key coding system (optional extra)

Key coding system is available as an option. Key combination numbers (KB1~4) are selectable, and same number combination of the handle and the body is operational.

Combination diagram	Key shaft				Concave of key shaft	Convex of spring pin
	KB1	KB2	KB3	KB4		
Key combination No.	KB1	KB2	KB3	KB4		

When the keyshaft and body are matching, it's possible to remove and insert of the key.

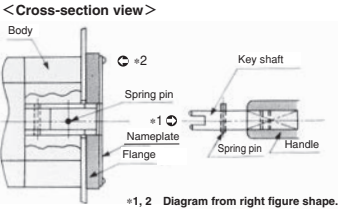



CAM-OPERATED SWITCH




B TYPE, BH TYPE

OUTLINES

Dual body type

B-HW,TW,FW,EW




(B type)

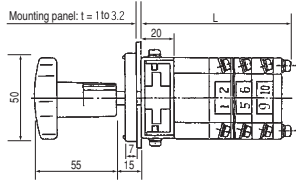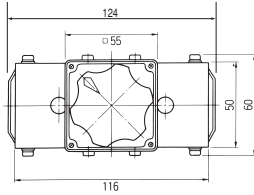

Dual body type

BH-HW,TW,FW,EW

(BH type)

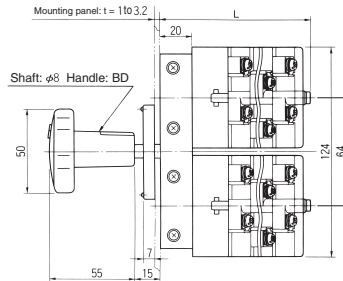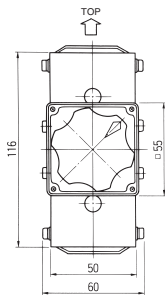

No. of stages	1	2	3	4	5	6	7	8	9
L (mm)	63	76	89	102	115	128	141	154	167

* Please select a handle shape from page A6. (for dual body type)