




B TYPE, BH TYPE

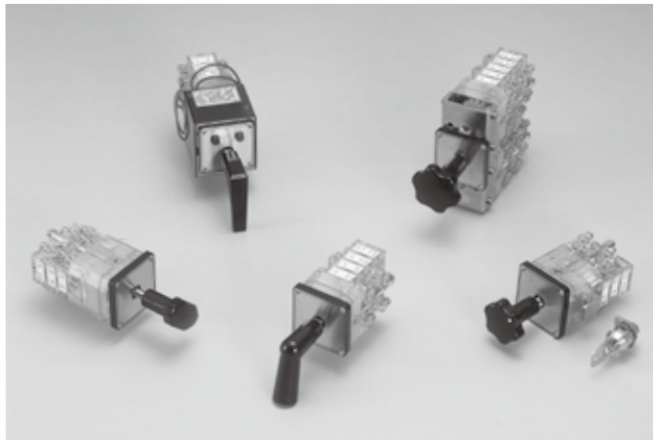


INDEX FOR B / BH TYPE CAM-OPERATED SWITCH

Item	Page	Item	Page	Item	Page
Features	A1	Handle code	A6	Voltmeter / Ammeter Switches	A27 to 30
Specifications / Breaking Capacity	A2	Standard Specifications	A7 to 11	Contact Arrangement of Standard Switches	A31 to 48
How to Order	A3	Special Specifications	A12 to 22	Accessories	A49 to 50
Notch code	A4 to 5	Mounting Hole Dimensions	A23	Nameplates	A51 to 54
Contact code	A5	Contact Arrangement Diagram	A24 to 26	Technical Information	A55 to 56

FEATURES


■Heavy-duty mechanical durability against high-frequent switching

Since the optimal layout of components and by using materials with high wear resistance for the mechanical section, it can be provides accurate operation feeling and durability against high-frequent switching up to 5 million times.

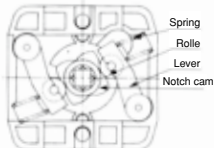

■The terminal arrangement greatly improves wiring efficiency

No up-screw terminal is adopted. It can be quickly wired from the back for the alternate terminal arrangement.

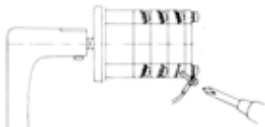


■Campability both compact body and high breaking capacity and yet greatly improved breaking capacity

Larger breaking capacity of the switches generally requires that the main body enlargement. However, Fuji's control switches has achieved downsizing while increasing the breaking capacity.

This breakthrough has been made possible by optimally designing the cam shapes and the angle of the movable contact parts for obtaining max. switching speed mechanically.

This allows you to determine the setting values (voltage and current) with allowance.

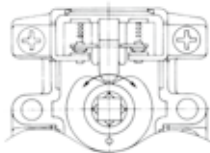


■High-performance engineering plastics ensure high quality and high reliability

For the body, polycarbonate resin is used, which has a high level of performance among engineering plastics. The material greatly improves strength and resistance against environment (temperature, humidity, vibrations, etc.), which are particularly important for the applications related to heavy electric machineries. The contacts and mechanical parts are transparent to facilitate checking the contacting part.

Rolling action of contact mechanism
improves contact stability

In the contact mechanism, the movable contact makes contact with the stationary contact at one point and then gradually increases the contact area while rolling on it. This rolling action minimizes the part exposed to the arc that is generated at the first contact or breaking, thereby maintaining much higher contact stability than the former product.

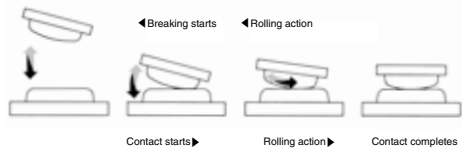

SPECIFICATIONS (RATINGS, PERFORMANCE)

Specification	Type	B TYPE	BH TYPE
Rated insulation voltage (UI)		600V	
Rated current-carrying capacity (Ith)		20A	
Max. wire size		5.5mm ²	
Screw size		M4×9	
Withstand voltage		2,500V AC / 1 min.	
Lightning impulse		±7kV (1.2 / 50μs)	
Contact resistance		50mΩ or less	
Mechanical life		5,000,000 operations or more, Class 1	
Electrical life		500,000 operations or more, Class 1	
Shock resistance		500m/s ² or more (6 directions)	
Vibration resistance		Range of vibration : 10 to 150Hz, Acceleration : 20m/s ² , Time : 1 hour (3 directions)	
Min. power requirements		5V AC 500mA, 5V DC 100mA (operating environment must be good)	
Operating temperature		-20 to 60°C	
Storing temperature		-40 to 70°C	
Altitude		2,000 m or less	

Breaking capacity [electrical life of 500,000 operations (class 1)]

AC			DC				
Rated voltage (V)	Rated operating current (resistance load) (A)	Rated operating current (inductive load) (A)	Rated voltage (V)	Rated operating current (resistance load) (A)	Rated operating current (inductive load) (A)	2 contacts used in series Rated operating current (resistance load) (A)	2 contacts used in series Rated operating current (inductive load) (A)
110	20	15	24	15	10	20	20
220	15	10	48	10	6	18	15
440	4	3	110	3	1.5	4.5	4
—	—	—	220	1.2	0.8	2	1.5

* Inductive load: For AC: Power factor 0.6 to 0.7 (Class: AC11)
For DC: Time constant 40±6 ms (Class: DC12)



B TYPE, BH TYPE

HOW TO ORDER

①Type (There's contact arrangement at diagram)

BH-T2002-LD-B54-000

①

②

⑦

⑧

⑨

②Type (There's no contact arrangement at diagram)

BH-T2-2B2A-LD-B54-000

①

③

④

⑤

⑥

⑥

⑦

⑧


⑨

No.	Item	Code	Detail	Note
①	Basic type	B	Screw side is up / down	There are exceptions.
		BH	Screw side is right / left	
②	Contact arrangement	Please see page A31 for contact arrangement diagram.		—
③	Notch code	Please see page A4 to 5 for mechanical operation method.		—
④	No. of units	1 ~	No. of units	Max. unit No. varies from notch and type of switches.
⑤	No. of contacts	1 ~	No. of contacts	1 unit has 2 contacts. (There is only 1 contact in 1 unit in some cases.)
⑥	Contact code	Please see page A5 for Contact code.		About representation of contact code, please refer to the following picture.
⑦	Handle code	Please see page A6 for Handle code.		—
⑧	Color of handle / flange		Munsell color code	—
			Handle Flange	
		B	N1.5 N1.5	
		BG	7.5BG3/3.5 7.5BG4/1.5	
⑨	Nameplate	Please see page A51 to 54 for Nameplate.		Please select a nameplate No., when the nameplate No. is not specified, plain nameplate is attached.

* For the type that corresponding to the all kinds of standard, please contact us separately.

About No. of contacts / Contact code

Contact code shows contact ON(close) notch position(s).
And terminal 1-2, 3-4, ... from the left of codes.

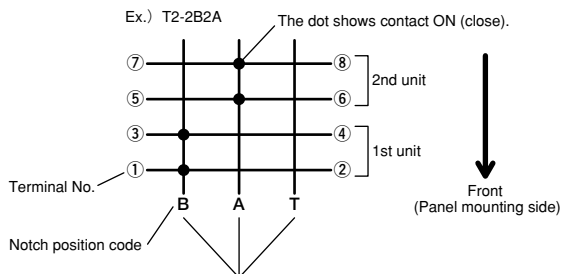

B type ... Screw side is up / down



BH type ... Screw side is right / left



■ Notch code

Code	H	HB	HA	K	V	TB	TA	T	F
Notch configuration									
Operation	(90° - 2) 2 notches	(90° - 2) 2 notches	(90° - 2) 2 notches	(90° - 3) 3 notches	(90° - 4) 4 notches	(45° - 2) 2 notches	(45° - 2) 2 notches	(45° - 3) 3 notches	(45° - 4) 4 notches
Manual return									

Code	E	G	J	O	B	A	S	TR, TL	FR, FL
Notch configuration									
Operation	(45° - 5) 5 notches	(45° - 6) 6 notches	(45° - 7) 7 notches	(45° - 8) 8 notches	(45° - 2) 2 notches	(45° - 2) 2 notches	(45° - 3) 3 notches	(45° - 3) 3 notches	(45° - 4) 4 notches
Manual return					Automatic return		Combination of manual and automatic return		

Code	FS	303	305	306	307	308	309	310	311
Notch configuration									
Operation	(45° - 4) 4 notches Combination of manual and automatic return	(30° - 3) 3 notches	(30° - 5) 5 notches	(30° - 6) 6 notches	(30° - 7) 7 notches	(30° - 8) 8 notches	(30° - 9) 9 notches	(30° - 10) 10 notches	(30° - 11) 11 notches
Manual return									

Code	312	305S	307S	454S	454SR	455S
Notch configuration						
Operation	(30° - 12) 12 notches Manual return	(30° - 5) 5 notches	(30° - 7) 7 notches	(45° - 4) 4 notches	(45° - 4) 4 notches	(45° - 5) 5 notches
Automatic return						



B TYPE, BH TYPE

■ Notch code

Code	SB	SBW	BB	AB	SQ	SQA	SQR	SQL	SQRL
Notch configuration									
Operation	Automatic rotating return								
	Automatic axial return								

Code	SR	SRL	SRR	SY	SN	SM	SUY□	SUB□
Notch configuration								
Operation	Automatic rotating return						Manual axial return	
	Manual axial return			Manual axial return	Automatic axial return	Manual axial return	Automatic axial return	

Code	HC	TC	FC	SC	HW	TW	FW	EW
Notch configuration	The handle is removable as in H, T, F, and S.				The stage is the dual body type as in H, T, F, and E.			
Operation	(90° - 2) 2 notches	(45° - 3) 3 notches	(45° - 4) 4 notches	(45° - 3) 3 notches	(90° - 2) 2 notches	(45° - 3) 3 notches	(45° - 4) 4 notches	(45° - 5) 5 notches
	Manual return			Automatic return	Manual return			

(Note) In the above table, the ● mark indicates the ordinary stop position of the switch and the → mark shows that the switch moves in this direction and then automatically stops in the arrowhead position.

●→ means that the switch is manually moved from ● to ●.

■ Contact code

Code	Graphic symbol	Designation	Description	Code	Graphic symbol	Designation	Description
B, A		Normal contact	B, A, T...V	M		Continuous closing contact	Contacts close between left and center.
T...V			Closed in each notch position.	N		Continuous closing contact	Contacts close between right and center.
U		U (push) / L (pull)-contact	Contacts open after pulling	BX		Dual contacts (Gold plating)	Closed in the B notch position.
L			Contacts close after pulling	AX		Dual contacts (Gold plating)	Closed in the A notch position.
Y		Close keep contact	Contact closes after turning to the left and keep closed till turning to the right.	L		Over-lapping contact	Just before one contact closes (ON) the other contact opens during operation.
Z			Contact closes after turning to the right and keep closed till turning to the left.				

■ Handle code

Code	LDP	LD	HDP	HD	LFP
Shape	Rose shape (large) with one point 	Rose shape (large) 	Rose shape (small) with one point 	Rose shape (small) 	Octagonal shape (large) with one point
Code	LF	HFP	HF	LP	HP
Shape	Octagonal shape (large) 	Octagonal shape (small) with one point 	Octagonal shape (small) 	Stick shape (large) 	Stick shape (small)
Code	MP	HR	LS*	LE	HE
Shape	Pistol shape (large) 	Pistol shape (small) 	Knob shape 	Egg shape (large) 	Egg shape (small)
Code	HSP	USP	<p>* The shaft for the LS handle is <u>13 mm shorter</u> than the standard shaft. Therefore, other types of handles cannot be replaced with the LS handle (knob shape).</p>		
Shape	Beak shape (large) 	Beak shape (small) 			

■ Handle code (For dual body type / pulling lock and pushing lock type)

Code	BD	BF	BP	MD	MF
Shape	Rose shape (large) 	Octagonal shape (large) 	Stick shape (large) 	Rose shape (small) 	Octagonal shape (small)
Code	MQ	MR			
Shape	Stick shape (small) 	Pistol shape (small) 			



B TYPE, BH TYPE

STANDARD SPECIFICATION SWITCHES




OUTLINES

Manual return and automatic return type

B-S,B,A, (H,K,V,T,F,E,G,J,O)
(305,306,307,308)

* The BY type has the same dimensions and shape. (Unit color: Blue)

(B type)

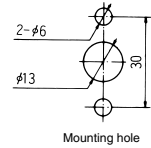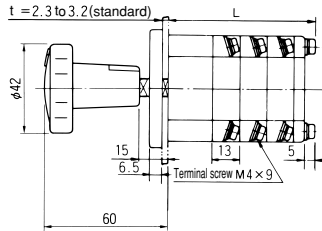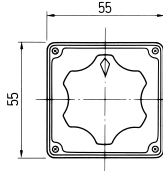

No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	43	56	69	82	95	108	121	134	147	160




* Max unit No. of the Automatic return type is 6 (12 contacts).

Manual return and automatic return type

BH-S,B,A, (H,K,V,T,F,E,G,J,O)
(305,306,307,308)

* The BHY type has the same dimensions and shape. (Unit color: Blue)

(BH type)

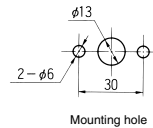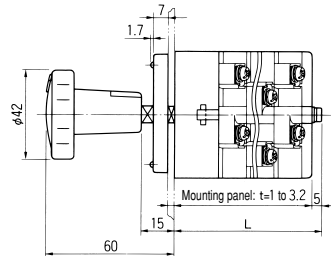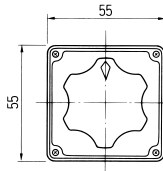




No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	43	56	69	82	95	108	121	134	147	160

* Max unit No. of the Automatic return type is 6 (12 contacts).

Combination of manual and automatic return type

B-TR,TL,FR,FL,FS

(B type)

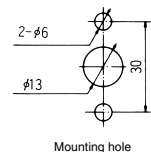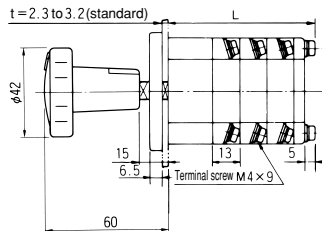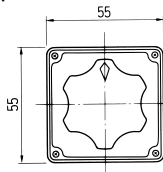


No. of units	1	2	3	4	5	6
L (mm)	43	56	69	82	95	108

Automatic return type by pulling

B-SB


(B type)

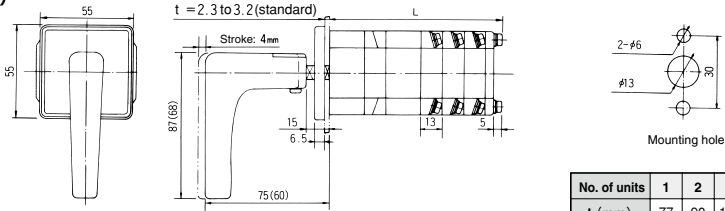

Automatic return type by pulling

BHX-SB


(BH type)

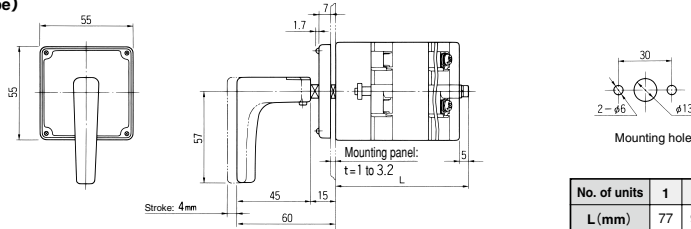

Automatic or manual return type in axial direction

B-SQ,SR,SY


(B type)

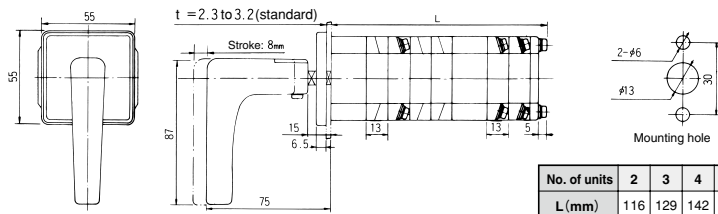

Automatic return type by pulling and pushing

BHW-SQ,SR,BHX-SY

(BH type)

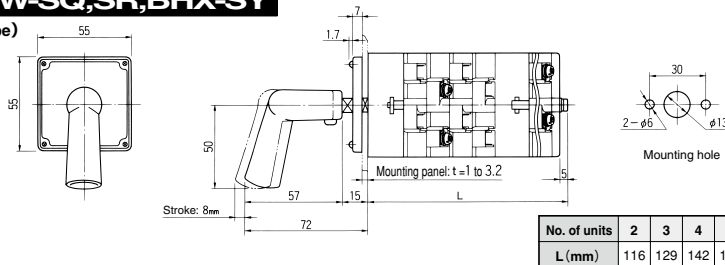



B TYPE, BH TYPE


OUTLINES

Pulling lock and pushing lock type

B-SN, SM

* The handle returns to orepating position after pushing the lock release button.

(B type)

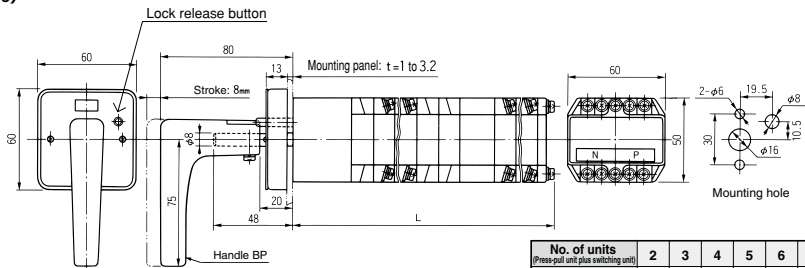

No. of units (Press-pull unit plus switching unit)	2	3	4	5	6	7	8
L (mm)	131	144	157	170	183	196	209


* The shaft shape is different from the basic one.
Please select a handle shape from page A6. (for pulling lock and pushing lock type)

Manual / Automatic axial return type

B-SUB, SUY (H, HB, HA, K, V, TB TA, T, F, E, G, J, O)

* A phrase in brackets insert to the blank.

(B type)

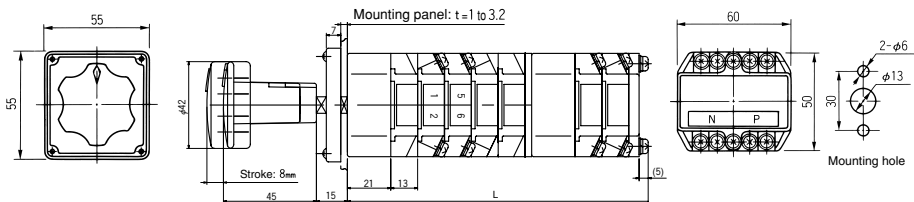


No. of units	2	3	4	5	6	7	8
L (mm)	119	132	145	158	171	184	197

Manual / Automatic axial return type

BHX-SUB, SUY (H, HB, HA, K, V, TB TA, T, F, E, G, J, O)


* A phrase in brackets insert to the blank.

(BH type)

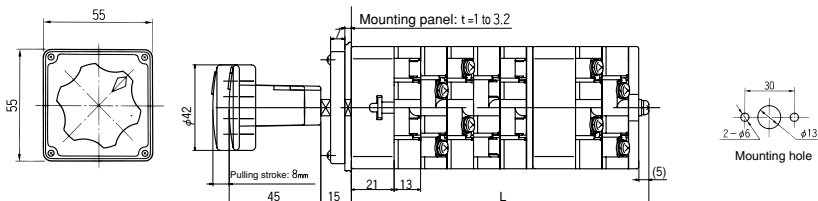

No. of units	2	3	4	5	6	7	8
L (mm)	119	132	145	158	171	184	197

(B type)

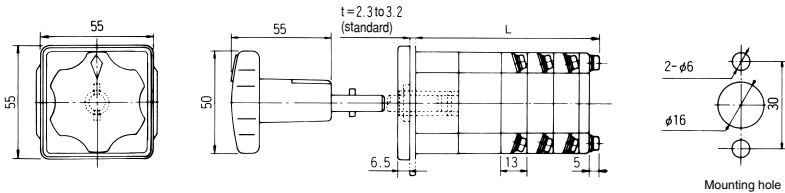


No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	64	77	90	103	116	129	142	155	168	181

* Max. unit No. of the automatic return type is 6 (12 contacts).

BHK-HC,TC,FC,SC



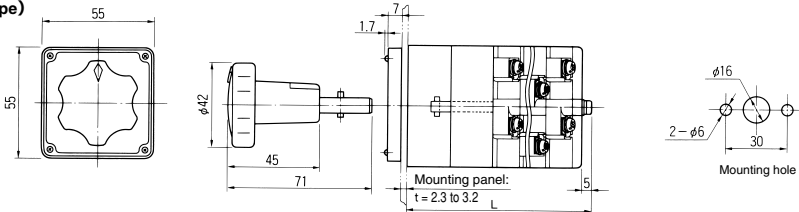

(BH type)



No. of units	1	2	3	4	5	6	7	8	9	10
L (mm)	64	77	90	103	116	129	142	155	168	181











■ Handle removal position

Removal position is selectable.
(More than one positions are available.)

HC	TC	FC	SC
			


■ **Key coding system (optional extra)**

Key coding system is available as an option. Key combination numbers (KB1~4) are selectable, and same number combination of the handle and the body is operational.

Combination diagram	Key shaft 1					 
	Body-2					
Key combination No.	KB1	KB2	KB3	KB4		

When the keyshaft and body are muching, it's pasible to remove and insert of the key.

<Cross-section view>

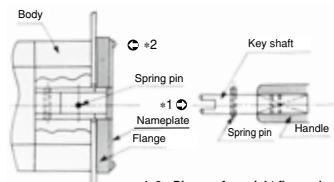

*1, 2 Diagram from right figure shape.






B TYPE, BH TYPE

OUTLINES

Dual body type

B-HW,TW,FW,EW




(B type)

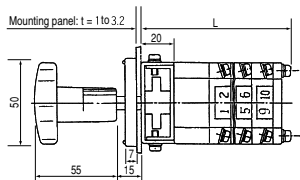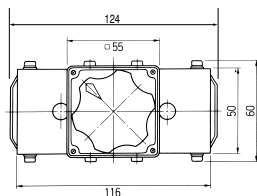

Dual body type

BH-HW,TW,FW,EW

(BH type)

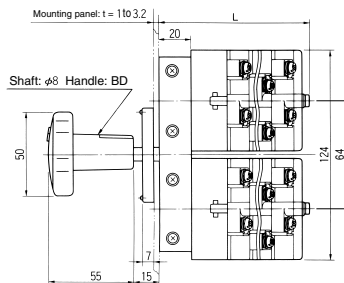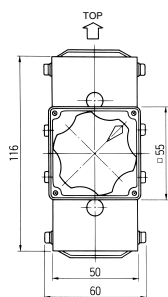

No. of stages	1	2	3	4	5	6	7	8	9
L (mm)	63	76	89	102	115	128	141	154	167

* Please select a handle shape from page A6. (for dual body type)

SPECIAL SPECIFICATION SWITCH CODING FOR ORDERING

1

Key handle type

A key is used as the handle.

- Available notch : S, H, T, F, E
- Max. unit No. is 4.
- C-88 and C-110 that made by Takigen is used. No. K6510 of C-88 is a standard key.
- Please see page A14 for information of key system.

1) C-88 key (Not available for master key system)

B-KMC-H2-2B2A-B NUKI B C-88 K6510

Notch code		No. of units	No. of contacts	Contact code	Color of handle / flange	Key lock position	Key type	Key No.	
Code	Switch							K6510 - K6520	Standard
B-KMC	B type						C-88	*	Specified No.
BHO	BH type								

2) C-110 key (Available for master key system)

B-KMC-H2-2B2A-B NUKI B C-110 (AAA111) FUJI13


Notch code		No. of units	No. of contacts	Contact code	Color of handle / flange	lock position	Key type	*Master key No.		Key No. (change key)	
Code	Switch							*	Specified No.	*	Specified No.
B-KMC	B type						C-110				
BHO	BH type										

*Available character for master key No. / key No. (change key)	
Max. number of character	Master key No. Within 6 (7 for number only) Key No. Within 7
Available character	Number (0 - 9), Alphabet (A - Z) =Blank is not available.

OUTLINES

B-KMC

(B type) * The screw side is on the right/left in this type. In case of B type, it's generally on the up/down.

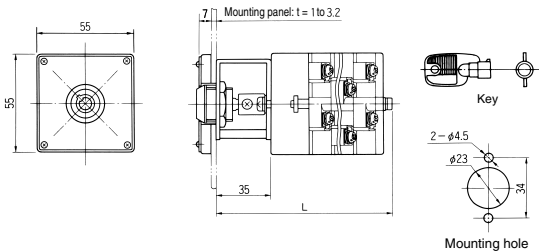


Key lock position

S	H	T	F	E
NUKI C	NUKI A NUKI B	NUKI A NUKI T	NUKI A NUKI F	NUKI T NUKI F

The key is used to directly operate the switch.
For the key, please see the specifications of the key.
If the another key lock position is needed, please contact us.
* 「NUKI」 means key lock position.

BHO

(BH type) * The mounting hole is on the vertical in this type. In case of BH type, it's generally on the horizontal.

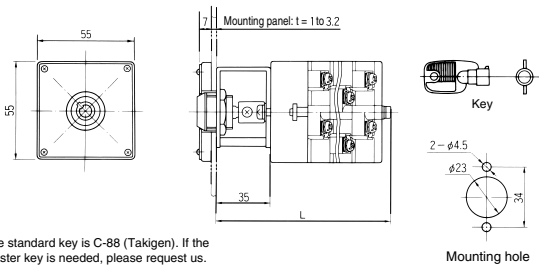

The standard key is C-88 (Takigen). If the master key is needed, please request us.
C-110 (Takigen) key is provided as a master key.

No. of units	1	2	3	4
L (mm)	78	91	104	117



B TYPE, BH TYPE

SPECIAL SPECIFICATION SWITCH CODING FOR ORDERING

2

Cylinder key type

Locked with an insert key. To open / close the switch, unlock the key and then operate the handle.

1) C-88 key (Not available for master key system)

B-KM-H2-2B2A-LD-B NUKI B C-88 K6510

Notch code			No. of units		Handle code		Key lock position		Key No.	
Code	Switch	Key position	Contact code		Key type		Key No. - K6520		Standard	
B-KM	B type	Right	No. of contacts		C-88		Not available for master key system		Specified No.	
BHC	BH type	Bottom	Color of handle / flange							

- Available notch : S, H, T, F, E, K, W, and SB.
- Max. unit No. is 10.
- C-88 and C-110 that made by Takigen is used. No. K6510 of C-88 is a standard key.
- Please see page A14 for information of key system.

2) C-110 key (Not available for master key system)

B-KM-H2-2B2A-LD-B NUKI B C-110 (AAA111) FUJI13

Notch code			No. of units		Handle code		Key lock position		= Master key No.		Key No. (change key)	
Code	Switch	Key position	Contact code		Key type		Key No. - C-110		Not available for master key system		Specified No.	
B-KM	B type	Right	No. of contacts		C-110		Not available for master key system					
BHC	BH type	Bottom	Color of handle / flange									


*Available character for master key No. / key No. (change key)

Max. number of character	Master key No.	
	Key No.	Within 6 (7 for number only)
Available character	Number (0 - 7), Alphabet (A - Z)	
	*Blank is not available.	

OUTLINES

B-KM

(B type)

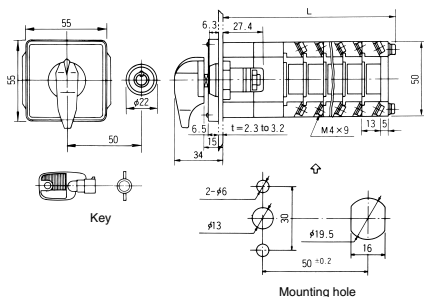

Key lock position

S/SB	H	T	F	E	K
NUKI C	NUKI BA	NUKI BA NUKI BT NUKI AT NUKI BAT	NUKI BATF	NUKI BATFE	NUKI DPK
	NUKI B NUKI A	NUKI B NUKI A NUKI T			


Key lock position



Normally, the key removal position is upside.

BHC

(BH type)

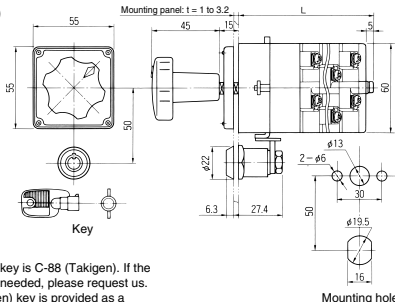


The standard key is C-88 (Takigen). If the master key is needed, please request us.
C-110 (Takigen) key is provided as a master key.

KEY SYSTEM

■C-88 type

[Master key is disused]




			x2pcs	x2pcs	x2pcs	x2pcs	x2pcs
same number key	K6510 only	1 type	K6510	K6510	K6510	K6510
different number key	K6511 to K6520	10 types	K6511	K6512	K6513	K6514

- Special character keys also available. Please see "Available character for key No."

■C-110 type

[Master key is needed]

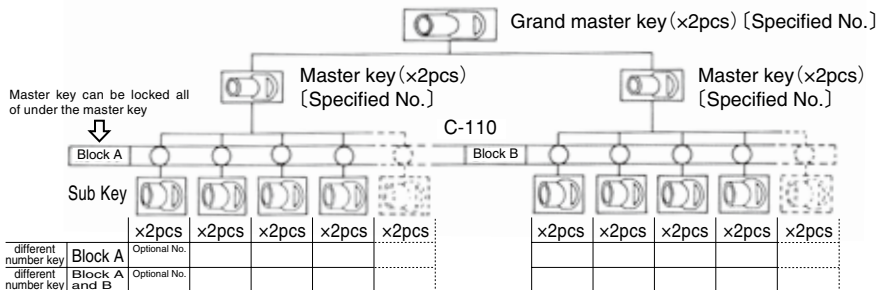

- Key will be decided depends on a decision that a common use with door lock or the master key is needed or not.
- In the case of C-110, if the master key specified No. and sub key specified No. are selected, the master key can be possible to lock the sub key.
- It's not available to make an additional subkey, because of the relationship between masterkey and subkey are already decided at the stage at manufacture.
- Life time of the key is 10,000 times. (Insertion - Extraction)

■ Available character for master key No. / key No. (change key)

Max. number of character	Master key No.	6 (7 for number only)
	Key No.	7
Available character	Number (0 - 9), Alphabet (A - Z) *Blank is not available.	



B TYPE, BH TYPE

SPECIAL SPECIFICATION SWITCH CODING FOR ORDERING

3

Switch with padlock mechanism

Locked with a padlock. To open / close the switch, unlock the padlock and then open / close the key while pushing or pulling the unlocking lever.

B-KH-H2-2B2A-LD-B NUKI B

Code	Switch	Unlocking lever type	No. of contacts	Contact code	Color of handle / flange	Key lock position
B-KH	B type	Pushing type				
BHP	BH type	Pulling type				

Notch code No. of units Handle code Key lock position


- Available notch : S, H, T, F, and SB.
- Max. unit No. is 10.
- Normally a padlock is attached to the down side of the switch.
- Padlock is not attached.
- Please use a padlock with diameter of 6 mm.

OUTLINES

B-KH

(B type) * The screw side is on the right/left, and the mounting hole is on the horizontal in this type.

In case of B type, generally the screw side is on the up/down, and the mounting hole is on the vertical.

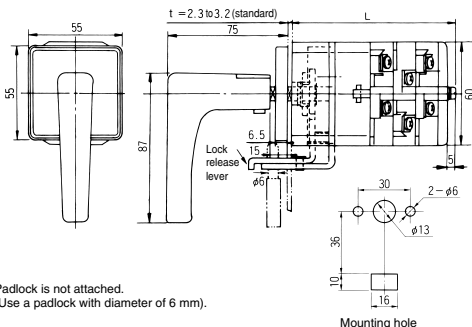


* Padlock is not attached.
(Use a padlock with diameter of 6 mm).

Key lock position

S	H	T	F	E	K
NUKI C	NUKI BA	NUKI BA NUKI BT NUKI AT NUKI BAT	NUKI BATF	NUKI BATFE	NUKI DPK

BHP

(BH type)

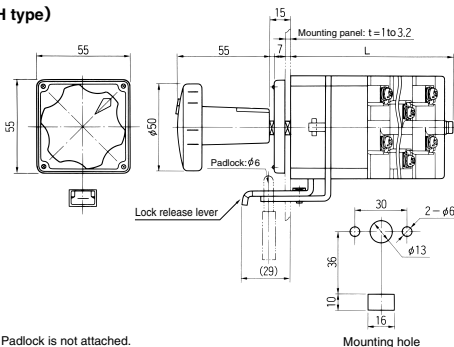

* Padlock is not attached.
(Use a padlock with diameter of 6 mm).

○ Remove the padlock and push the lock release lever for handle operation. The switch will be locked automatically after releasing your hand, then please lock with a padlock.

No. of units	1	2	3	4	5	6	7	8
L (mm)	67	80	93	106	119	132	145	158

4

High-frequent type switch

This cam switch is designed for high-frequent heavy-duty uses, in iron manufacture and chemical plants, etc.

BM-H2-2B2A-LD-B


Notch code		No. of contacts	Handle	Color of handle / flange
Code	Switch			
BM	B type	No. of units	Contact code	
BHM	BH type			

- Available notch : S, H, T, F, and SB. The 30° version is also available.
- High-frequent operation type.
- Please specify if you need the oil-proof type. In the case of oil-proof type, PBT resin is used for the case.

OUTLINES


BM

(B type)

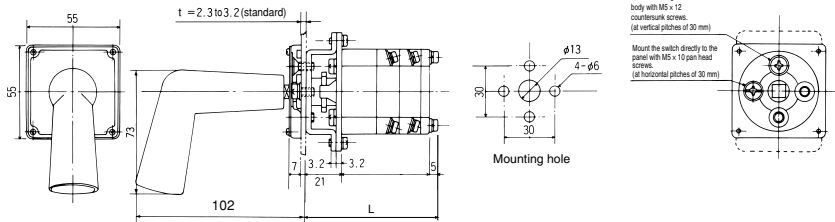

BHM

(BH type)

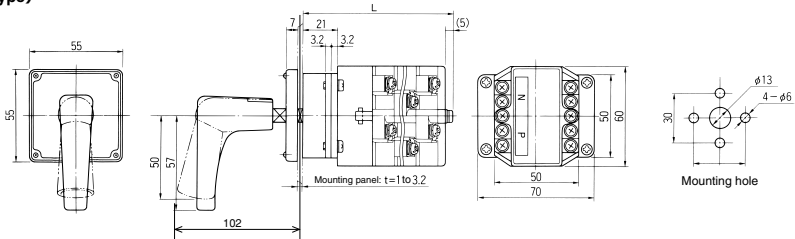

No. of units	1	2	3	4	5	6	7	8	9
L (mm)	65	78	91	104	117	130	143	156	167



B TYPE, BH TYPE

SPECIAL SPECIFICATION SWITCH CODING FOR ORDERING

5

Switch with indicator lamp (separate)

This is a switch that an indicator lamp is attached on top.
An indicator mounting hole is additionally required.

Part of lamp display

BL-H2-2B2A-215-LD-B

Notch code		Contact code		Display color	Color of handle / flange
Code	Switch	No. of contacts	Voltage	Handle code	
BL	B type				
BH1	BH type				

●The notches and specification are the same as those of the standard switches.


●For the circuit, voltage, and display color of the indicator, please see the following table and specify the corresponding numbers.

Circuit	Voltage	Display color
1 For 1 indicator lamp	1 24V DC	1 W (Milky white)
2 For 2 indicator lamps	2 48V DC	2 R (Red)
3 For 3 indicator lamps	3 100 / 110V DC	3 G (Green)
	4 125V DC	4 O (Orange)
	5 100 / 110V AC	5 GR
	6 200 / 220V AC	6 GWR
	7 30V DC	7 GOR
9 Special	9 Special	9 Special

OUTLINES


BL

(B type)

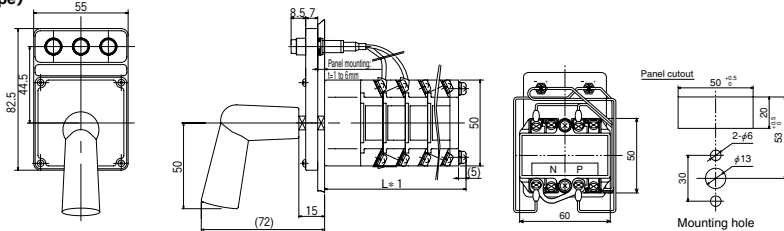

BH1


(BH type)

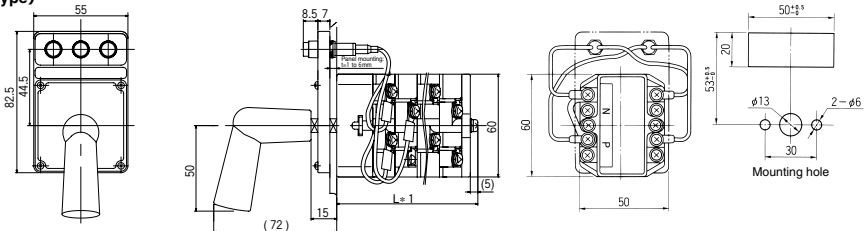

No. of units	1	2	3	4	5	6	7	8	9	10
L (mm) For 1 indicator	56	69	82	95	108	121	134	147	160	173
L (mm) For 2 indicators										
L (mm) For 3 indicators	69	82	95	108	121	134	147	160	173	186

* The lamp power supply unit is not included in the above number of units.

●Lamp position



6

Switch with indicator lamp (built-in)

This is a switch that a signal indicator is attached on top.

Part of lamp display

BHS-S2-2B2A-235-LP-B

Code	Switch	No. of units	Contact code	Circuit	Handle code	Display color	Color of handle / flange
BHS	BH type		No. of contacts				
BHS-B	BH type (with rear terminal block)						

● Available notch: S, H, T, F and SB, SR, SY also available.


● For the circuit, voltage, and display color of the indicator lamp, please see the following table and specify the corresponding numbers.

Circuit	Voltage	Display color
1 For 1 indicator lamp	1 24V DC	1 W (Milky white)
2 For 2 indicator lamps	2 48V DC	2 R (Red)
3 For 3 indicator lamps	3 100 / 110V DC	3 G (Green)
	4 125V DC	4 O (Orange)
	5 100 / 110V AC	5 GR
	6 200 / 220V AC	6 GWR
	7 30V DC	7 GOR
9 Special	9 Special	9 Special

OUTLINES


BHS

(BH type)

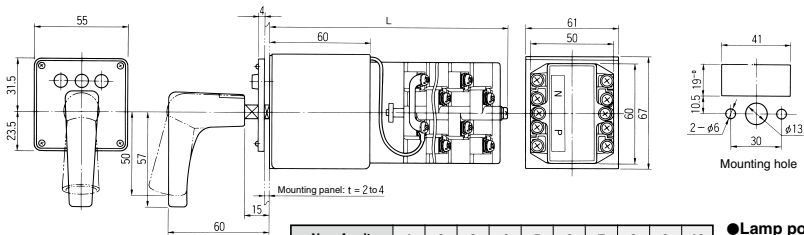

No. of units	1	2	3	4	5	6	7	8	9	10
L (mm) For 1 indicator	116	129	142	155	168	181	194	207	220	233
L (mm) For 2 indicators	129	142	155	168	181	194	207	220	233	246
L (mm) For 3 indicators	142	155	168	181	194	207	220	233	246	259


● Lamp position



With indicator lamp (built-in) and rear terminal block type


BHS-B

(BH type)

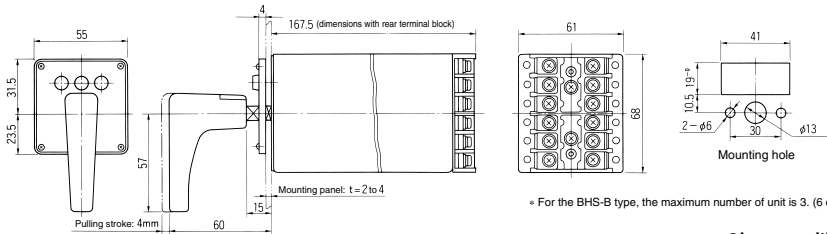

* For the BHS-B type, the maximum number of unit is 3. (6 contacts)

● Lamp position





B TYPE, BH TYPE

SPECIAL SPECIFICATION SWITCH CODING FOR ORDERING

7

Lockout relay switch (Coil type)

This is an auxiliary relay used in a circuit breaker or the main part of adjustment.

BA-6 2A2B-DC24V-LP-B

Code	Switch
BA-6	B type
BHE	BH type

Handle code	Color of handle / flange
24V DC	24V DC
48V DC	48V DC
110V DC	110V DC
125V DC	125V DC

Circuit voltage

24V DC	24V DC	220V DC	200 / 220V DC
48V DC	48V DC	110V AC	100 / 110V AC
110V DC	100 / 110V DC	220V AC	200 / 220V AC
125V DC	125V DC		

●For the switching speed, please see technical data on A55.


●The notch is 2 stage.

●Max unit No. is 8.


OUTLINES

BA-6


(B type)

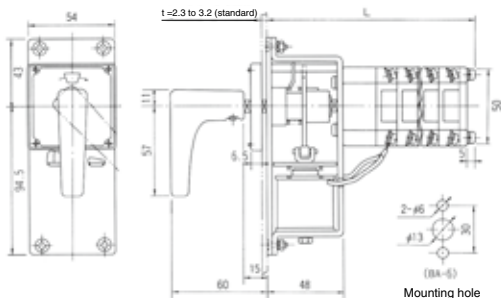

Example of circuit



Example of usage



Features and application


The coil is of instantaneous rating specification, so requiring that the self-contact be connected in series to the coil as illustrated.

Contacts specified by a user.

The contacts for the provided coil is not included in the contacts ordered.

BHE

(BH type)

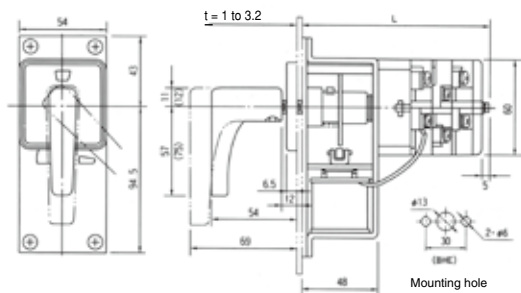

Coil specifications

Circuit voltage	24V DC	48V DC	100 / 110V DC	125V DC	200 / 220V DC
Coil resistance	5.3 Ω	25 Ω	55 Ω	80 Ω	350 Ω

* P and N polarities for the coil terminals are free.

No. of units	1	2	3	4	5	6	7	8
L (mm)	104	117	130	143	156	169	182	195



B TYPE, BH TYPE

SPECIAL SPECIFICATION SWITCH CODING FOR ORDERING

9

Minute current switch (BY)

This switch is used in the applications requiring environmental resistance or using minute electric current.

BY-H2-2BX2AX-LD-B

Code	Switch	No. of contacts	Handle code	Color of handle / flange
BY	B type	No. of units	Contact of minute current switch (Ends with "X")	Notch code
BHY	BH type			

* Outline is same as standard B / BH type.

- For the specification, please see technical data on A56.
- The notches are the same as those of the standard switches.
- For a contact, X is added to the standard contact symbol like AX.
- This switch can be assembled within a switch with standard contacts. However the units for the contacts of the minute current is exclusive unit.

Ex.) BY-H2-2BX2A

Standard contact
Minute current contact

- In case of lapping contact, L (Minute current lapping contact) is added after X (Minute current contact).

Ex.) BY-H2-2BXL2A




Standard contact
Minute current lapping contact

- Minute current contact is applicable to other standard products.




Ex.) BHY-H2-2BX2AX

OUTLINES

BY

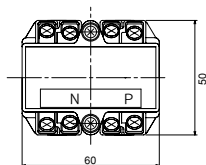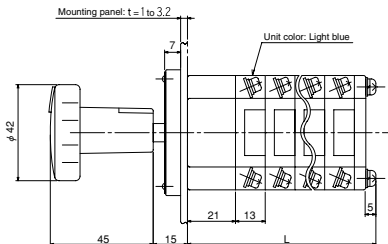

BHY

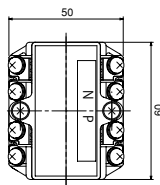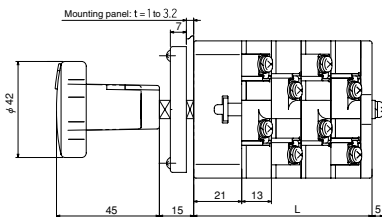

10 Rear terminal type switch

Since the terminal part is arranged to the

Since the terminal part is arranged to the rear side, it's possible to use the space effectively.


- It's possible to chose any notches except pull (push) type.

BH-B-H2-2B2A-LD-B

Diagram illustrating the structure of a cable identification code:

- Basic type
- Notch code
- No. of units
- No. of contacts
- Handle code
- Contact code
- Color of handle / flange

OUTLINES

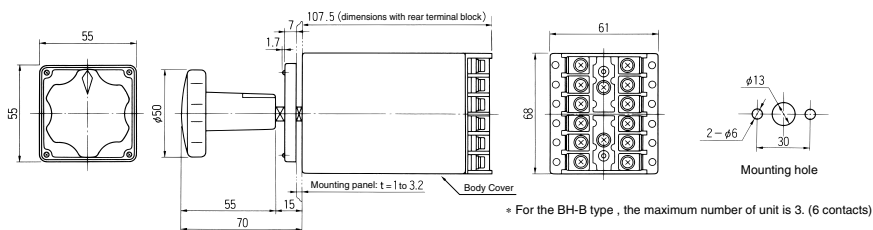BH-B



B TYPE, BH TYPE

MOUNTING HOLE DIMENSIONS

B TYPE	B		B-SN, SM	B-HC, TC, FC, SC	B-KMC	BL
	H.T	Manual return				
	S	Automatic return				
	SB	Pushing and pulling				
	SQ	Dual body type				
	W	Lockout relay				
	BA-6					
	Mounting screw		M5×12 countersunk screws: 2	M5×12 countersunk screws: 2	M4×12 countersunk screws: 2	M5×10 countersunk screws: 2
	B-KM		B-KH		BM	
	Key: right		Key: bottom	Key: right	H.T S SB	
	Key: bottom		Key: bottom	Key: right	Manual return Automatic return Pushing	
	M5×12 countersunk screws: 2		M5×10 countersunk screws: 2	M5×10 countersunk screws: 2	M5×10 pan head screws: 2 M5×12 countersunk screws: 2	
BH TYPE	BH		BHK	BHO	BHC	
	H.T	Manual return			Key: bottom	Key: right
	S	Automatic return				
	SB	Pushing and pulling				
	SQ	Dual body type				
	W	Lockout relay				
	BHE					
	Mounting screw		M5×10 countersunk screws: 2	M5×12 countersunk screws: 2	M4×12 countersunk screws: 2	M5×10 countersunk screws: 2
	BHP		BHI	BHS, BHSB	BHM	
	Key: bottom		Key: right		H.T S SB	
	Key: right				Manual return Automatic return Pushing	
	M5×10 countersunk screws: 2		M5×10 countersunk screws: 2	M5×12 countersunk screws: 2	M5×10 pan head screws: 2 M5×10 countersunk screws: 2	

INSTRUCTIONS FOR CONTACT ARRANGEMENT DIAGRAM

1 Graphic symbol

Contact type	Symbol
Normal contact	
Close keep contact	
Continuous closing contact	
Overlapping contact	

Operation	Symbol
Manual return (rotating direction)	Not indicated
Manual return (axial direction)	
Auto return (to neutral position)	
Auto return (axial direction)	

2 Development representation method

Contact arrangement diagrams should be viewed from the panel surface with the handle positioned below. Vertical line shows notch positions, and horizontal line shows connected circuits with terminal numbers. To enter the contact symbols, follow the order of terminal numbers starting with the front stage.

Fig. 1 T2-B1AT1BAL1TL





Fig. 1 shows the 45-degree, 3-stage switching type.

- Terminal 1-2 is closed at the B notch.
- Terminal 3-4 is continuously closed at the A and T notches.
- Terminals 5-6 and 7-8 are simultaneously closed (overlapping) in the middle between the A and T notches.

Fig. 2 SBZ3-1Y1Z1M1N1C1A

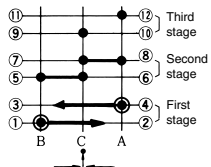

- Terminal 3-4 is closed at the A notch. Even if it returns to the central position, it remains closed. It is opened at the B notch.

Fig. 2 shows the automatic return type by pulling. The handle can be pulled at the central position, and it returns to the central position after releasing the handle.

- Terminal 1-2 is closed at the B notch. Even if it returns to the central position, it remains closed. It is opened at the A notch.
- Terminal 5-6 is opened at the A notch.
- Terminal 7-8 is opened at the B notch.
- Terminal 9-10 is closed at the C notch.
- Terminal 11-12 is closed at the A notch.

3 Notes on diagrammatic representation

1. When the rotational angle of the handle is less than 180 degrees

(When the rotational angle of the notch is 45 degrees)

When the total number of contacts is even (number of units) = $\frac{(\text{total number of contacts})}{2}$


When the total number of contacts is odd (number of units) = $\frac{(\text{total number of contacts})+1}{2}$

■ Number of stages

Each unit has 2 contacts. This means that the number of units is half of the total number of contacts. However, if the handle is turned by 180 degrees or more, each unit may not be included 2 contacts.



2. When the rotational angle of the handle is 180 degrees or more

(5 notches at 45 degrees, 3 notches at 90 degrees or more) A single cam actuates 2 contacts, upper and lower side. Therefore, when the cam is rotated by 180 degrees or more, its concavity to close either contact may also close the other contact. In this case, the upper and lower contacts cannot be combined freely.

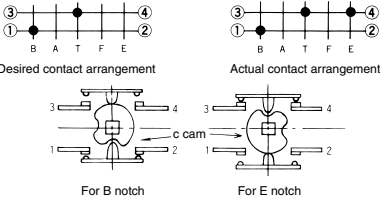

3. Contact diagram of BY type arrangement (example)



F3-2B2AX2TX

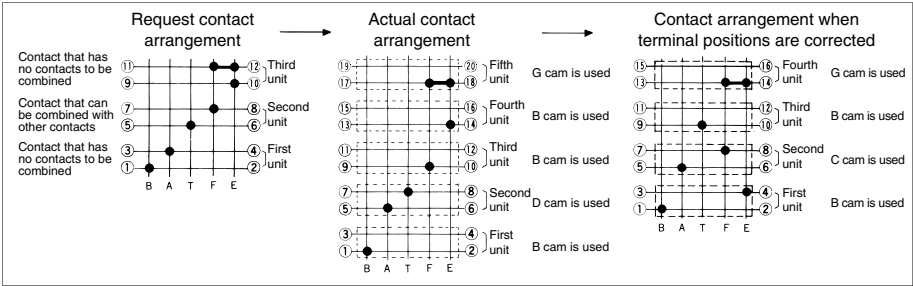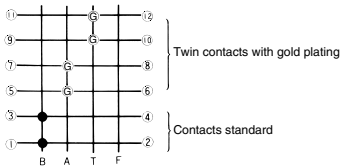





B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM FOR B AND BH TYPE CAM SWITCHES

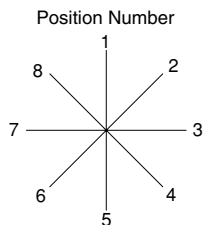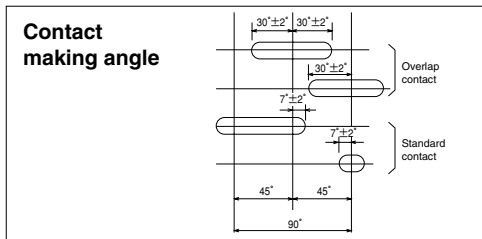

Standard cam (45 degrees)



Set Position No.

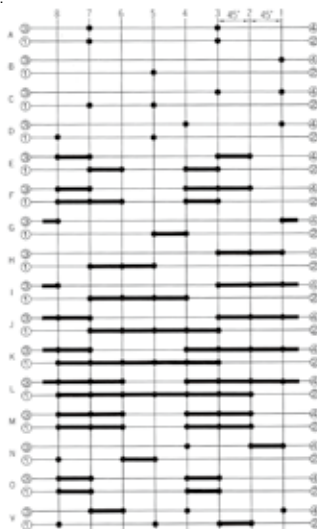
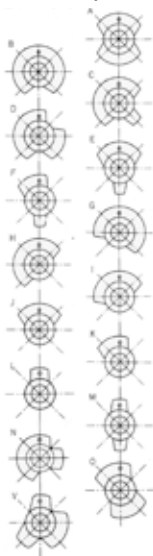


Overlap cam (45 degrees)

Set Position No.



Overlap cam (45°)

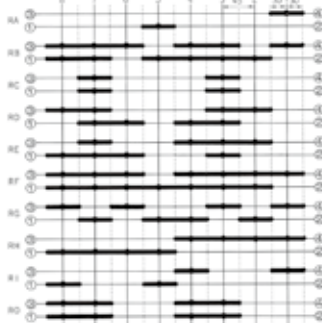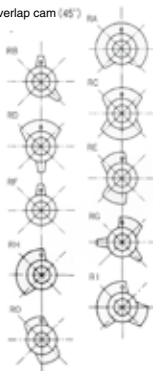

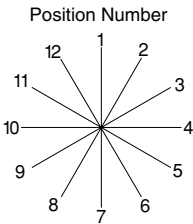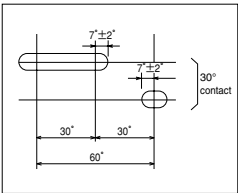

30-degrees cam

Set Position No.

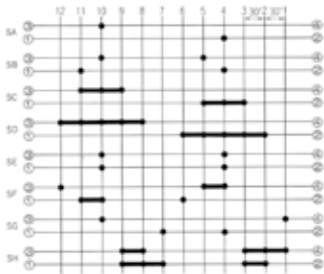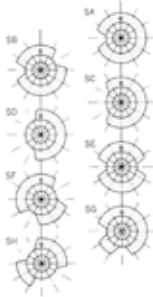



B TYPE, BH TYPE

VOLTMETER • AMMETER SWITCH

HOW TO ORDER

B-V3-HDP-B JUMPER

Code	Switch	Type	Handle code	Color of handle / flange	Code	Jumper
B	B type	(page A27 to 30)	(page A6)		(Blank)	No jumper
BH	BH type				JUMPER	With jumper

• The mark " " shows a jumper.

STANDARD ARRANGEMENT DIAGRAM

Notice: Jumpers are not standard accessory.







If it's necessary, please instruct "with jumper".

a) For voltmeter (standard handle: HDP)







Type V3 Nameplate No. 54-753 (E)	3-phase, 3-wire, 2-PT
Type V2 Nameplate No. 54-490 (E)	3-phase, 3-wire, 2-PT
Type NV4 Nameplate No. 54-752	3-phase, 3-wire, 3-PT
Type NV3 Nameplate No. 54-751	3-phase, 3-wire, 3-PT
Type NV2E Nameplate No. 54-558	3-phase, 4-wire, 3-PT

• If added "E" to the end of nameplate number, the nameplate in English shall be attached. For further details, please see page A51 to A52 for nameplate.
 Ex) 54-753 : Japanese 54-753E : English

a) For voltmeter (standard handle: HDP)

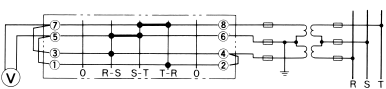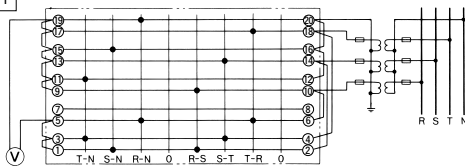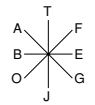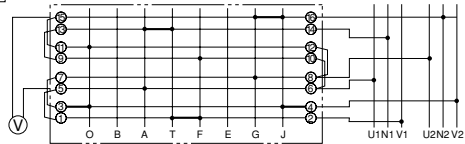Type V2E  Nameplate No. 54-557 (E)	3-phase, 3-wire, 2-PT 
Type V5W  Nameplate No. 54-850 (E)	3-phase, 4-wire, 3-PT 
Type V4O-2 	single 3-wire, 2-PT 

b) For ammeter (standard handle: HDP)

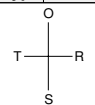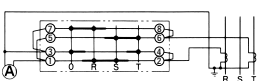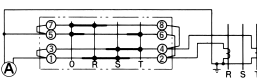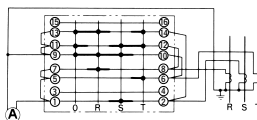Type A2  Nameplate No. 54-755 (E)	3-phase, 3-wire, 2-CT 
Type C2  Nameplate No. 54-495 (E)	3-phase, 3-wire, 2-CT 
Type A4  Nameplate No. 54-755 (E)	3-phase, 3-wire, 3-CT 










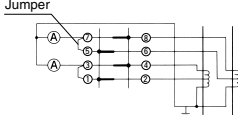

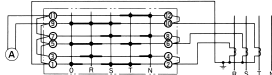

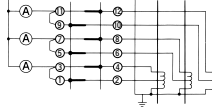
* For details of nameplates, see A51 to A52 and subsequent pages.






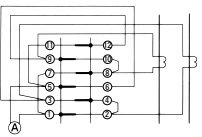

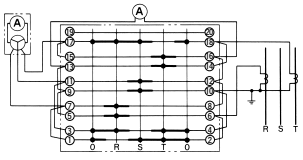

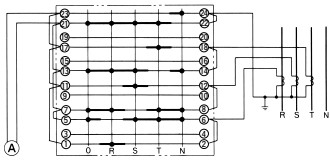

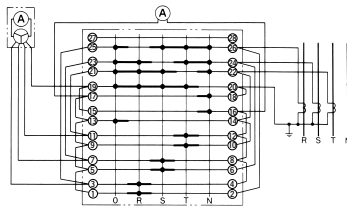

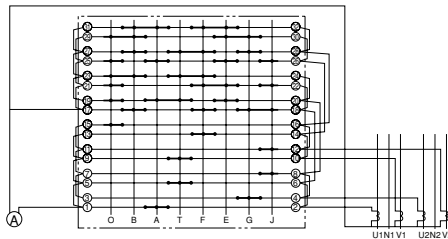
B TYPE, BH TYPE

STANDARD ARRANGEMENT DIAGRAM

b) For ammeter (standard handle: HDP)
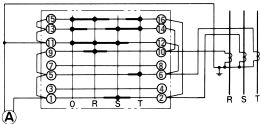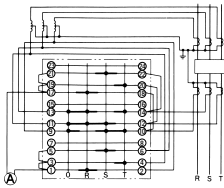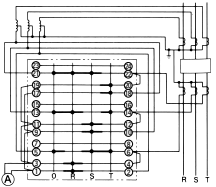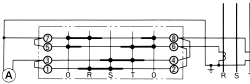
<p>Type C4</p>  <p>Nameplate No. 54-495 (E)</p>	<p>3-phase, 3-wire, 3-CT</p> 
<p>Type A6</p>  <p>Nameplate No. 54-755 (E)</p>	<p>3-phase, 3-wire, 3-CT (when differential relay is used)</p> 
<p>Type C6</p>  <p>Nameplate No. 54-495 (E)</p>	<p>3-phase, 3-wire, 3-CT (when differential relay is used)</p> 
<p>Type C2E</p>  <p>Nameplate No. 54-555 (E)</p>	<p>3-phase, 3-wire, 2-CT</p> 
<p>Type C2H</p> 	<p>for change ratio of current transformation</p> <p>Jumper</p> 
<p>Type C3E</p>  <p>Nameplate No. 54-556 (E)</p>	<p>3-phase, 4-wire, 3-CT</p> 
<p>Type C3HT</p> 	<p>for change ratio of current transformation</p> 

* If added "E" to the end of nameplate number, the nameplate in English shall be attached. For further details, please see page A51 to A52 for nameplate.
Ex) 54-753 : Japanese 54-753E : English
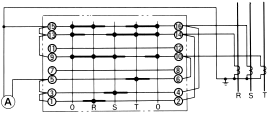
<div>TypeC4E</div> <div></div> <div>Nameplate No. 54-555 (E)</div>	<div>3-phase, 3-wire, 3-CT</div> <div></div>
<div>TypeC3HA</div> <div></div> <div></div>	<div>single-phase, 2-line</div> <div></div>
<div>TypeC5E</div> <div></div> <div>Nameplate No. 54-555 (E)</div>	<div>3-phase, 3-wire, 2-CT</div> <div></div>
<div>TypeC6E</div> <div></div> <div>Nameplate No. 54-556 (E)</div>	<div>3-phase, 4-wire, 3-CT</div> <div></div>
<div>TypeC7E</div> <div></div> <div>Nameplate No. 54-556 (E)</div>	<div>3-phase, 4-wire, 3-CT</div> <div></div>
<div>TypeC80-2</div> <div></div> <div></div>	<div>single 3-wire, 2-CT</div> <div></div>

* For details of nameplates, see A51 to A52 and subsequent pages.




B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM INDEX

Operation	Notch code	Contact number	Page	Operation	Notch code	Contact number	Page
Automatic return	S,SB	2,4,6,8	A31 to 32	45° 3-position changeover	T	2,4,6,8,10,12,14,16,18,20,24,28	A41 to 45
Automatic return (45 degree operation)	B,A	2,4	A33	45° 4-position changeover	F	4,6,8,10,12	A45 to 46
Automatic return with close keep contact	SZ	4,6,8	A33	45° 5-position changeover	E	4,6,8,10,12,14,16,24,30,32	A46 to 48
Automatic return type by pulling and pushing	SQ	4,6,8	A33	45° 6-position changeover	G	6	A48
90° 2-position changeover	H	2,4,6,8,10,12,14,16,18,20,24,26,28,30,32	A34 to 40				

CONTACT ARRANGEMENT DIAGRAM

■Automatic return (S, SB)



●2 contacts (1 unit)

Type (automatic return)	S1001	S1002	S1003	S1004	S1005	S1006	S1007
Detail	S1-1B1A	S1-2B	S1-2A	S1-1C1A	S1-2BA	S1-1M1N	S1-1M1B
Contact arrangement							
Type (pulling)	SB1001	SB1002	SB1003	SB1004	SB1005	SB1006	SB1007
Detail	S1-1N1A	S1-1N1B	S1-2N	S1-1A1B	S1-1A1N	S1-1B1M	
Contact arrangement							
Type (pulling)	SB1008	SB1009	SB1010	SB1101	SB1102	SB1103	
Detail	S1-1N1A	S1-1N1B	S1-2N	S1-1A1B	S1-1A1N	S1-1B1M	
Contact arrangement							

●4 contacts (2 units)

Type (automatic return)	S2001	S2002	S2003	S2004	S2005	S2006	S2007
Detail	S2-2B2A	S2-4A	S2-1B2C1A	S2-1B1C2A	S2-1M1N1B1A	S2-1M1N2A	S2-2N1B1A
Contact arrangement							
Type (pulling)	SB2001	SB2002	SB2003	SB2004	SB2005	SB2006	SB2007
Detail	S2-2N2A	S2-2M2N	S2-1N1B1C1A	S2-1N1B2A	S2-1N3A	S2-2A2B	S2-1N1B2A
Contact arrangement							
Type (pulling)	SB2008	SB2009	SB2010	SB2011	SB2012	—	SB2101
Detail	S2-2N2A	S2-2M2N	S2-1N1B1C1A	S2-1N1B2A	S2-1N3A	S2-2A2B	S2-1N1B2A
Contact arrangement							
Type (pulling)	SB2008	SB2009	SB2010	SB2011	SB2012	—	SB2101
Detail	S2-2N2A	S2-2M2N	S2-1N1B1C1A	S2-1N1B2A	S2-1N3A	S2-2A2B	S2-1N1B2A
Contact arrangement							
Type (pulling)	SB2102	SB2103	SB2104	SB2105	SB2106	—	SB2107
Detail	S2-2A2N	SB2-2 (1A1B)	S2-2A2C	S2-2 (1A1B)	S2-1A1N1B1A	S2-1A1B1N1M	S2-2 (1A1N)
Contact arrangement							
Type (pulling)	SB2102	SB2103	SB2104	SB2105	SB2106	—	SB2107
Detail	S2-2A2N	SB2-2 (1A1B)	S2-2A2C	S2-2 (1A1B)	S2-1A1N1B1A	S2-1A1B1N1M	S2-2 (1A1N)
Contact arrangement							
Type (pulling)	SB2108	SB2109	SB2110	SB2111	SB2120	—	SB2122
Detail	S2-1A1B1C1BA	S2-1A1B1A1N	S2-1A3B	SB2-2 (1B1A)	S2-1B1A1N	SBL2-2L1A1B	
Contact arrangement							

CONTACT ARRANGEMENT DIAGRAM

●6 contacts (3 units)

Type (automatic return)	S3001	S3002	S3003	S3004	S3005	S3006
Detail	S3-3B3A	S3-6A	S3-2B2C2A	S3-2B2A2BA	S3-2B4A	S3-4B2A
Contact arrangement						
Type (pulling)	SB3001	SB3002	SB3003	SB3004	SB3005	SB3006
Type (automatic return)	S3007	S3008	S3009	S3010	S3101	—
Detail	S3-2M2B2A	S3-2N2B2A	S3-2M2N1B1A	S3-2N4A	S3-3A3B	SB3-3(1A1B)
Contact arrangement						
Type (pulling)	SB3007	SB3008	SB3009	SB3010	—	SB3101
Type (automatic return)	S3104	S3104	S3104	S3104	S3104	S3104
Detail	SB3-3(1A1N)	S3-2A2B2C	SBL3-2L1M1N1B1A	SBL3-202L1A1B	SBL3-202L1A1B	SBL3-202L1A1B
Contact arrangement						
Type (pulling)	SB3102	—	SBL3202	SBL3311	—	—

●8 contacts (4 units)


Type (automatic return)	S4001	S4002	S4003	S4004	S4005
Detail	S4-4B4A	S4-2B4C2A	S4-2M2N2B2A	S4-4N2B2A	S4-2N2B4A
Contact arrangement					
Type (pulling)	SB4001	SB4002	SB4003	SB4004	SB4005
Type (automatic return)	S4006	S4007	—	S4006	S4007
Detail	S4-2N4B2A	S4-4N4A	SBL4-2U2L2(1A1B)	S4-2N4B2A	S4-4N4A
Contact arrangement					
Type (pulling)	SB4006	SB4007	SBL4311	—	—



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■Automatic return type (45 degree operation) (B, A)




●2 contacts (1 unit)

Type	B1001	A1001	A1002
Detail	B1-2B	A1-2A	A1-1C1A
Contact arrangement			

●4 contacts (2 units)

Type	B2001	A2001
Detail	B2-4B	A2-4A
Contact arrangement		

■Automatic return type with close keep contact (SZ)



●4 contacts (2 units)

Type	SZ2001	SZ2002	SZ2003	SZ2004
Detail	SZ2-2Z1B1A	SZ2-2Y1B1A	SZ2-1Y1B	SZ2-1Z1A
Contact arrangement				

●6 contacts (3 units)

●8 contacts (4 units)

Type	SZ3001	SZ4001
Detail	SZ3-1Y1Z1M1N1B1A	SZ4-2Y2Z1M1N1B1A
Contact arrangement		

■Automatic return type and manual return type in axial direction (SQ)



●4 contacts (2 units)

Type	SQ2001	SQ2002	SQ2211	SQ2212
Detail	SQ2-2U1B1A	SQ2-2L1B1A	SQ2-2U1A1B	SQ2-2L1A1B
Contact arrangement				

●4 contacts (3 units)

Type	SQ2101
Detail	SQ2-1U1L1B1A
Contact arrangement	


●6contacts (3 units)

Type	SQ3201	SQ3202	SQ3203	SQ3311
Detail	SQ3-2U2B2A	SQ3-2U2 (1A1B)	SQ3-2L2B2A	SQ3-2U2L1A1B
Contact arrangement				

●8 contacts (4 units)

Type	SQ4301	SQ4311
Detail	SQ4-2U2L2B2A	SQ4-2U2L2 (1A1B)
Contact arrangement		

90° 2-position changeover (H)



2 contacts (1 unit)

Type	H1001	H1002	H1003	H1004	H1005	H1006
Detail	H1-1B1A	H1-2B	H1-2A	H1-1BL1AL	H1-1B1BA	H1-1A1BA
Contact arrangement						

Type	H1101	H1102
Detail	H1-1A1B	H1-1AL1BL
Contact arrangement		

4 contacts (2 units)

Type	H2001	H2002	H2003	H2004	H2005	H2006
Detail	H2-2B2A	H2-4B	H2-4A	H2-1B3A	H2-3B1A	H2-1B1A2BA
Contact arrangement						

Type	H2008	H2009	H2101	H2102	H2103	H2104
Detail	H2-2BL2AL	H2-1B1A1BL1AL	H2-2A2B	H2-2AL2BL	H2-2 (1A1B)	H2-3A1B
Contact arrangement						

Type	H2105	H2106	H2108	H2109	H2110
Detail	H2-1A1B2A	H2-1A1B1AL1BL	H2-2 (1AL1BL)	H2-1AL1BL1A1B	H2-2 (1B1A)
Contact arrangement					


Type	H2111	H2112	H2113
Detail	H2-1A1B2BA	H2-2 (1BL1AL)	H2-1B1A2B
Contact arrangement			



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■90° 2-position changeover (H)



●6 contacts (3 units)

Type	H3001	H3002	H3003	H3004	H3005	H3006
Detail	H3-3B3A	H3-6B	H3-6A	H3-2A2BL2AL	H3-1B5A	H3-5B1A
Contact arrangement						
Type	H3007	H3008	H3009	H3010	H3011	H3101
Detail	H3-2B4A	H3-4B2A	H3-2B2A1BL1AL	H3-1B1A2BL2AL	H3-3BL3AL	H3-3A3B
Contact arrangement						
Type	H3102	H3103	H3104	H3105	H3106	H3107
Detail	H3-3(1A1B)	H3-3AL3BL	H3-5A1B	H3-3(1AL1BL)	H3-1A1B2AL2BL	H3-1A1B2A1B1A
Contact arrangement						
Type	H3108	H3109				
Detail	H3-4A2B	H3-3(1B1A)				
Contact arrangement						

●8 contacts (4 units)

Type	H4001	H4002	H4003	H4004	H4005	H4006
Detail	H4-4B4A	H4-8B	H4-8A	H4-3B3A1BL1AL	H4-2B6A	H4-6B2A
Contact arrangement						
Type	H4007	H4008	H4101	H4102	H4103	H4104
Detail	H4-4BL4AL	H4-3BA2B2A1B	H4-4(1A1B)	H4-4A4B	H4-4AL4BL	H4-2A2B2AL2BL
Contact arrangement						

●8 contacts (4 units)

Type	H4105	H4106	H4107
Detail	H4-2AL2BL2A2B	H4-4(1AL1BL)	H4-4(1B1A)
Contact arrangement			

●10 contacts (5 units)

Type	H5001	H5003	H5005	H5101	H5102
Detail	H5-5B5A	H5-10A	H5-2B8A	H5-5(1A1B)	H5-5A5B
Contact arrangement					

Type	H5103	H5104	H5105	H5106	H5107
Detail	H5-1A1B4(1AL1BL)	H5-3AL3BL2AL2BL	H5-5(1B1A)	H5-5(1AL1BL)	H5-2A8B
Contact arrangement					

●12 contacts (6 units)


Type	H6001	H6002	H6003	H6004	H6005	H6006
Detail	H6-6B6A	H6-12B	H6-12A	H6-2B10A	H6-4B8A	H6-8B4A
Contact arrangement						



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■90° 2-position changeover (H)



●12 contacts (6 units)

●14 contacts (7 units)

Type	H6101	H6102	H6103	H6105	H6106	H7003
Detail	H6-6 (1A1B)	H6-6A6B	H6-10A2B	H6-4A8B	H6-6 (1B1A)	H7-14A
Contact arrangement						

●16 contacts (8 units)

Type	H8001	H8002	H8003	H8005	H8006	H8007
Detail	H8-8B8A	H8-6B10A	H8-4B12A	H8-16A	H8-7B9A	H8-8 (1B1A)
Contact arrangement						

Type	H8101	H8102	H8103	H8104	H8105	H8106
Detail	H8-8 (1A1B)	H8-8A8B	H8-1B15A	H8-2B14A	H8-10A6B	H8-14A2B
Contact arrangement						

●16 contacts (8 units)

Type	H8107	H8108
Detail	H8-3B13A	H8-8BL8AL
Contact arrangement		

●18 contacts (9 units)

Type	H9001	H9101	H9102	H9103
Detail	H9-9B9A	H9-1B17A	H9-2B16A	H9-3B15A
Contact arrangement				

●20 contacts (10 units)

Type	H10003	H10101	H10102	H10103	H10104
Detail	H10-20A	H10-10 (1A1B)	H10-18A2B	H10-16A4B	H10-14A6B
Contact arrangement					

(H)

A diagram of a right-angled triangle. The top vertex is labeled with a 90° angle. The two base vertices are labeled 'A' on the right and 'B' on the left. The triangle is formed by three line segments connecting these vertices.

Type	H10105	H10106	H10110	H10120
Detail	H10-12A8B	H10-10A10B	H10-10(1B1A)	H10-6BL4B4L4A1B1A
Contact arrangement	<p>B A</p>	<p>B A</p>	<p>B A</p>	<p>B A</p>

[illegible]

●24 contacts (12 units)

Type	H12106	H12107	H12108	H12110	H13001
Detail	H12-16A8B	H12-14A10B	H12-12A12B	H12-12 (1B1A)	H13-18A8B
Contact arrangement					

●28 contacts (14 units)

Type	H14101	H14102
Detail	H14-14 (1A1B)	H14-14 (1B1A)
Contact arrangement		

●30 contacts (15 units)

Type	H15110
Detail	H15-15 (1B1A)
Contact arrangement	

●32 contacts (16 units)


Type	H16101
Detail	H16-16 (1A1B)
Contact arrangement	



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■45° 3-position changeover (T)



●2 contacts (1 unit)

Type	T1001	T1002	T1003	T1004	T1005	T1006	T1007
Detail	T1-1B1T	T1-1B1A	T1-1A1T	T1-1T1AT	T1-1BA1AT	T1-1T1BT	T1-2BT
Contact arrangement							

Type	T1101	T1102	T1103
Detail	T1-1T1B	T1-1A1B	T1-1T1A
Contact arrangement			

●4 contacts (2 units)

Type	T2001	T2002	T2003	T2004	T2005	T2006
Detail	T2-2B2T	T2-2B2A	T2-2A2T	T2-1B2A1T	T2-2B1A1T	T2-1B1A2T
Contact arrangement						

Type	T2007	T2008	T2009	T2010	T2011	T2012
Detail	T2-2B2AT	T2-2T2AT	T2-1B1A1T1BA	T2-1B1A1T1AT	T2-1B1T1BA1AT	T2-2T1BA1AT
Contact arrangement						

Type	T2013	T2014	T2015	T2016	T2017	T2018
Detail	T2-1B2T1AT	T2-1B1A1T1BT	T2-1B1T2BT	T2-2BA2AT	T2-2A1B1L1TL	T2-1B1B1A1L1ATL1TL
Contact arrangement						

●4 contacts (2 units)

Type	T2019	T2101	T2102	T2103	T2104	T2105
Detail	T2-1BAL1ATL1TL1BL	T2-2 (1T1B)	T2-2AL1TL1BL	T2-2T2A	T2-2T2B	T2-2 (1T1A)
Contact arrangement						
Type	T2106	T2107	T2108	T2109	T2110	T2111
Detail	T2-2 (1B1T)	T2-1T1A1T1AT	T2-1T1A2AT	T2-1T1A2B	T2-1T1A1AT1B	T2-1T1AT1B1BA
Contact arrangement						
Type	T2112	T2114	T2115	T2116	T2117	T2118
Detail	T2-1T1B1AT1BA	T2-1T1A1AT1T	T2-1T1A1AT1BA	T2-2 (1AT1BA)	T2-1T1A1B1T	T2-1T1B2A
Contact arrangement						
Type	T2119	T2120	T2121	T2122	T2123	T2124
Detail	T2-1T1A1B1A	T2-1T1B1AT1B	T2-2T1A1B	T2-1ATL1BAL1BL1TL	T2-1T1A1B1BA	T2-2A1T1B
Contact arrangement						
Type	T2125	T2126	T2127	T2128	T2129	
Detail	T2-1T2A1B	T2-1BAL1BL1TL1ATL	T2-1B1A1T1A	T2-1TL1AL1BL1TL	T2-1T3B	
Contact arrangement						

●6 contacts (3 units)


Type	T3001	T3002	T3003	T3004	T3005	T3006
Detail	T3-3B3T	T3-2B2A2T	T3-3B3A	T3-3A3T	T3-2B4T	T3-2B2T2BT
Contact arrangement						



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■45° 3-position changeover (T)



●6 contacts (3 units)

Type	T3007	T3008	T3009	T3010	T3011	T3012
Detail	T3-2B1A1T1BA1AT	T3-1B1A2T1BA1AT	T3-3T3AT	T3-2T2BA2AT	T3-2BL2AL2TL	T3-2(1B1T)1B1A
Contact arrangement						
Type	T3013	T3101	T3102	T3103	T3104	T3105
Detail	T3-1B2A2T1BA	T3-3(1T1B)	T3-2(1T1A1B)	T3-2(1B1A1T)	T3-3T3B	T3-2T2A2B
Contact arrangement						
Type	T3106	T3107	T3108	T3109	T3110	T3111
Detail	T3-3T3A	T3-2(1T1A)1AT1BA	T3-2TL2AL2BL	T3-3(1T1A)	T3-3T1A1AT1BA	T3-1BL1TL1AL1T
Contact arrangement						
Type	T3112	T3113	T3114			
Detail	T3-2T2B2T	T3-1B1T1A2T	T3-2(1TL1AL1BL)			
Contact arrangement						

●8 contacts (4 units)

Type	T4001	T4002	T4003	T4004	T4005	T4006	T4007
Detail	T4-4B4T	T4-4A4T	T4-2B2A4T	T4-3B5T	T4-3B3T2BT	T4-2B2T2BA2AT	
Contact arrangement							
Type	T4008	T4009	T4010	T4011	T4101	T4102	T4103
Detail	T4-2B2A2T1B1T	T4-2B2T4A	T4-2(1B1A1T)2A	T4-2B3A3T	T4-4T4B	T4-2T2A1AT1BA1A1B	T4-2T2A1BA1AT1T1A
Contact arrangement							

●8 contacts (4 units)

Type	T4104	T4105	T4106	T4107	T4108	T4109	T4110
Detail		T4-2T6B	T4-1T1B6BT	T4-1B1T6BT	T4-2T2A2B1A1T1BA	T4-6AT1A1T	T4-2 (1B1A1T)1BT1T
Contact arrangement							

●10 contacts (5 units)

Type	T5001	T5004	T5005	T5006	T5101	T5102	T5103
Detail	T5-5B5T	T5-6B4T	T5-4 (1B1T) 1B1A	T5-2B4A4T	T5-3 (1B1A1T)	T5-3 (1T1A1B)	T5-3 (1TL1AL1BL)
Contact arrangement							

●10 contacts (5 units)

Type	T5104
Detail	T5-1T1B8BT
Contact arrangement	

●12 contacts (6 units)

Type	T6001	T6101	T6102	T6103
Detail	T6-6B6T	T6-4 (1B1A1T)	T6-4 (1T1A1B)	T6-8AT2A2T
Contact arrangement				

●14 contacts (7 units)

Type	T7122
Detail	T7-10AT2A2T
Contact arrangement	

●16 contacts (8 units)

Type	T8101
Detail	T8-5 (1B1A1T)
Contact arrangement	

●18 contacts (9 units)


Type	T9102	T9103
Detail	T9-6T6A6B	T9-10AT4A4T
Contact arrangement		



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■45° 3-position changeover (T)



●20 contacts (10 units)

Type	T10101
Detail	T10-16AT2A2T
Contact arrangement	


●24 contacts (12 units)

Type	T12001	T12101
Detail	T12-8B8A8T	T12-2(3B3A3T)2B2A2T
Contact arrangement		

●28 contacts (14 units)

Type	T14102
Detail	T14-24AT2A2T
Contact arrangement	

■45° 4-position changeover (F)



●4 contacts (2 units)

Type	F2001	F2002	F2003	F2004	F2101	F2102
Detail	F2-1B1A1T1F	F2-1B1F1TF1ATF	F2-1A1F1TF1ATF	F2-1TF1ATF1F1BATF	F2-1B1F1A1F	F2-2A1T1F
Contact arrangement						

●6 contacts (3 units)

Type	F3001	F3002	F3003	F3004	F3101	F3102
Detail	F3-2A2T2F	F3-1B1A1T1F1TF1ATF	F3-1B2F1BAT1TF1ATF	F3-1T1F1BF2AT1TF	F3-2(1F1B)2T	F3-2A2T1BAT1FL
Contact arrangement						

Type	F3103	F3104	F3110
Detail	F3-1B1A1T1F1T1F		
Contact arrangement			

●8 contacts (4 units)

Type	F4001	F4101
Detail	F4-2B2A2T2F	F4-2(1B1A1T1F)
Contact arrangement		


●10 contacts (5 units)

Type	F5101
Detail	F5-1B1F1T1F1BAT1F1A1B1F
Contact arrangement	

●12 contacts (6 units)

Type	F6101
Detail	F6-1B1F1T1F1BAT1F1A2(1B1F)
Contact arrangement	

■45° 5-position changeover (E)



●4 contacts (2 units)

Type	E2001	E2101	E2102
Detail	E2-1B1E1A1F		E2-1A1F1AT1F
Contact arrangement			

●6 contacts (3 units)


Type	E3001	E3002	E3003	E3004
Detail	E3-1B1E1A1F2T	E3-1A1F1BA1E1FE1B	E3-1B1E2(1A1F)	E3-1T1A1F1T1B1E
Contact arrangement				
Type	E3101	E3102	E3103	
Detail		E3-1F1T1A1ATF	E3-2A2T2F	
Contact arrangement				



B TYPE, BH TYPE

CONTACT ARRANGEMENT DIAGRAM

■45° 5-position changeover (E)



●8 contacts (4 units)

Type	E4001	E4002	E4003	E4101
Detail	E4-2 (1B1E) 2A2F	E4-1B1E1A1F2 (1BA1FE)	E4-1B1E1A1F4T	
Contact arrangement				

●10 contacts (5 units)

Type	E5001	E5101
Detail	E5-2 (1B1E) 2 (1A1F) 2T	E5-2 (1B1E) 2A2T2F
Contact arrangement		

●12 contacts (6 units)

Type	E6101
Detail	E6-2A2T1BAT1E2F1BAT1E1BAT1F1FE
Contact arrangement	

●14 contacts (7 units)

Type	E7101
Detail	E7-1AF1BE5 (1BA1FE)
Contact arrangement	


●16 contacts (8 units)

Type	E8101
Detail	E8-1AF1BE6 (1BA1FE)
Contact arrangement	



●24 contacts (12 units)

Type	E12102
Detail	E12-8 (1FE1BA) 2BE3 (1E1B)
Contact arrangement	


●30 contacts (15 units)

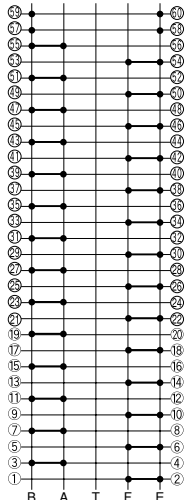Type	E15101
Detail	E15-14 (1FE1BA) 2BE
Contact arrangement	



●32 contacts (16 units)

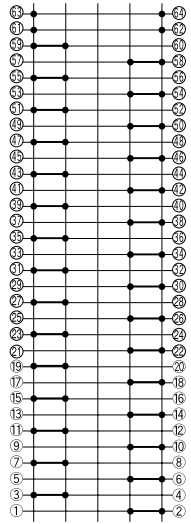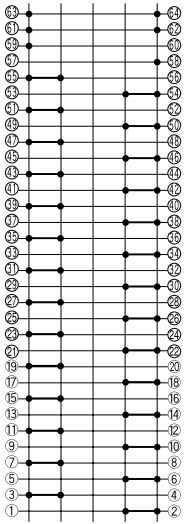Type	E16101	E16102
Detail	E16-15 (1FE1BA) 2BE	E16-14 (1FE1BA) 1E1B2BE
Contact arrangement		

■45° 6-position changeover (G)

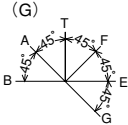

●6 contacts (3 units)

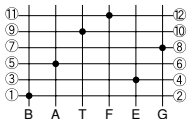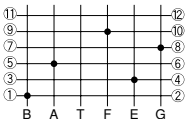Type	G3101	G3102
Detail	G3-1B1E1A1G1T1F	G3-1B1E1A1G1F
Contact arrangement		



B TYPE, BH TYPE

ACCESSORIES (selling separately)


Handle cover

●B-H HCV

This cover is used to prevent mis-operation. It is a magnet type that can be mounted on or removed from a panel easily.


(Material: Polycarbonate resin)

Note: This cover cannot be used for the MP type handle.

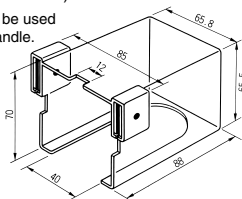

Jumper


For B and BH type

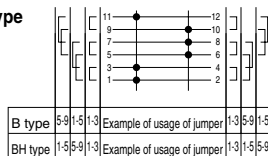


BS jumper 1-3



BS jumper 1-5




BS jumper 5-9




Terminal protection cover

●B-H PL terminal cover 1

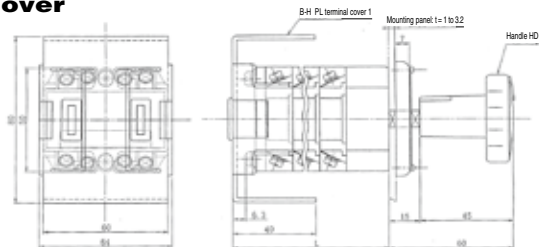


Note: This cover cannot be used for a rear terminal type.

●B-H PLS terminal cover

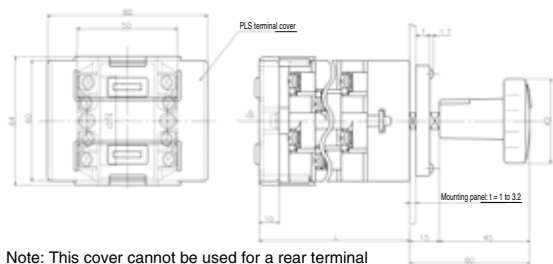

Note: This cover cannot be used for a rear terminal type.

●BH-CVN-□

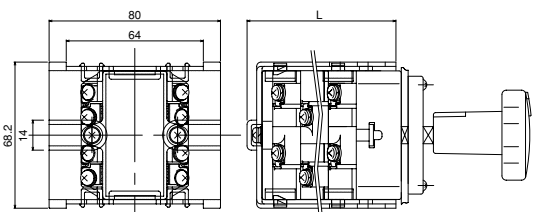

Note: This cover cannot be used for a rear terminal type and a dual-body type.

	Applicable unit number	L (mm)		Applicable unit number	L (mm)
AB	1 to 3 units	44	DB	10 to 12 units	160
BB	4 to 6 units	83	EB	13 to 15 units	199
CB	7 to 9 units	121.5			

* The above shows standard type switches.
Please ask for special types.

Flange (Nameplate) set □ : B(N1.5), BG (7.5BG4/1.5)

● B flange set□	● F panel set□	● Indicator flange set□	● BA-6 indicator flange set□
Supplied screws ① M5×10 countersunk 2 pcs. ② M4×15 SUS 3-piece 1 pc. ③ M2.6×4 tapping 4 pcs.	Supplied screws ① M5×10 countersunk 2 pcs. ② M4×15 SUS 3-piece 1 pc.	Supplied screws ① M5×10 countersunk 2 pcs. ② M4×15 SUS 3-piece 1 pc. ③ M2.6×4 tapping 4 pcs.	Supplied screws ① M5×10 countersunk 2 pcs. ② M4×15 SUS 3-piece 1 pc. ③ M2.6×4 tapping 4 pcs.

Handle

LD-B

Handle code	Color	Code	Color
B	N1.5	BG	7.5BG3/3.5

Code	Shape	Code	Shape
LD	Rose shape (large)	LP	Stick shape (large)
HD	Rose shape (small)	HP	Stick shape (small)
LDP	Rose shape (large) with dot	MP	Pistol shape (large)
HDP	Rose shape (small) with dot	HR	Pistol shape (small)
LF	Octagonal shape (large)	LS	Knob shape
HF	Octagonal shape (small)	LE	Egg shape (large)
LFP	Octagonal shape (large) with dot	HE	Egg shape (small)
HFP	Octagonal shape (small) with dot	HSP	Beak shape (large)
USP		USP	Beak shape (small)

Please check a dimensions from page A6 "Handle".

Quick nameplate attachment flange

New Product



HOW TO ORDER

B J Flange set B


No.	Item	Code	Detail
①	Basic type	B	B/BH type cam operated switch
②	Specification	J	Quick nameplate attachment flange
③	Set items	Flange set	Flange + Cover + Screw set
④	Color	B	Flange color : Black (N1.5)

* Supplied items...SS Countersunk screw M5x10, 4 screws.


* Material...Modified PPE (UL94V-0) adapted to the fire laws.

* About how to order when attach this item to the main body of the cam operated switch, please contact us separately.

OUTLINES

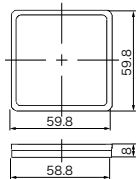

ASSEMBLY DRAWING

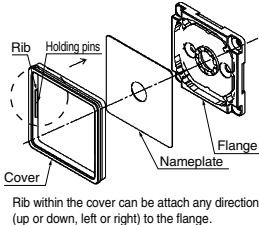

FEATURES

- Screw for the nameplate attachment is unnecessary.
- It's possible to quick attachment of the flange without attachment screws.
- Decreasing of work time for nameplate attachment is possible.



B TYPE, BH TYPE

ACCESSORIES


Nameplate

* Only by a nameplate, the form of arrangements B ムジ NP AL

(When there is a character in N1 and N2.)

For 2 notches

Nameplate No.	2	4	N1	N2
54-000	Plain (Outline only)*			
54-200	切	入		
54-201	手 動	自 動		
54-202	単 独	連 動		
54-203	直 接	遠 方		
54-204	減 速	増 速		
54-208	停 止	起 動		
54-209	停 止	運 転		
54-210	寸 動	常 時		
54-212	直 接	遠 方	遠方直接切換開器	
54-214	切	入	電源開閉器	
54-221	運 転	絶縁試験		切換スイッチ
54-222	常 用	非 常 用	切換SW	
54-223	平 常	雨 天	雨天モードスイッチ	
54-224	平 常	回 復	運転速度切換スイッチ	
54-227	切	入		操作スイッチ
54-240	切	入		制御電源
54-250	切	入	切換スイッチ	
54-251	切	入	操作スイッチ	
54-252	切	入	しゃ断器	
54-253	手 動	自 動	切換スイッチ	
54-257	切	入	制御電源	
54-265	不 使 用	使 用	再開路継電器	
54-267	切	入	引操作	
54-269	切	入	断路器	
54-271	1	2		
54-277	閉	開		
54-278	現 場	中 央		
54-279	No.1	No.2		
54-282	切	入	遮断器	
54-286	直 接	遠 方	切換スイッチ	
54-288	切	入	引きにて操作	
54-290	維 護	運 轉	43R	
54-2101	1	0		
54-2139	切	入	ATOスイッチ	
54-2142	定 位	分 割	分割運転スイッチ	
54-2147	自動解除	自 動		
54-2148	切	入		引きにて操作
54-2149	切	入		引いて手動 戻して自動
54-2150	切	入		引いて手元 戻して遠方
54-2152	ロ ッ ク	解 除		
54-2154	救 援	平 常		救援切換スイッチ
54-2155	通 常	絶 縁		絶縁切換スイッチ

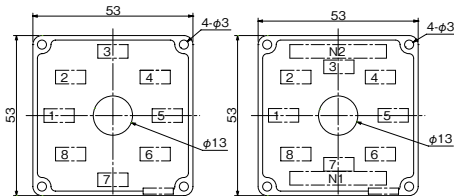

English

Nameplate No.	2	4	N1	N2
54-200E	OFF	ON		
54-201E	MANU	AUTO		
54-211E	LOCAL	REMOTE	CHANGE OVER SWITCH	
54-217E	IN	OUT	PROTECTION	
54-219E	IN	BUPASS	GUARD BYPASS	
54-220E	AUTO	MANUAL	TAP CHANGER CONTROL	
54-226E	OFF	ON		CONTROL
54-233E	REV.	FOR.		
54-234E	LOCAL	REMOTE		
54-236E	OPEN	CLOSE		
54-239E	LOCAL	MCC		
54-252E	OFF	ON	CIRCUIT BREAKER	
54-253E	OFF	ON		PULL TURN
54-282E	LOCAL	REMOTE	CONTROL	
54-285E	MANUAL	AUTO	CONTROL	
54-289E	OFF	ON	AUTO RECLOSING	
54-298E	CC	NCC		
54-2100E	IN	OUT		
54-2102E	OFF	ON	SYNCH OFF/ON	
54-2103E	OFF	ON	OUT/IN SEL.	
54-2104E	LOCK	IN-USE		
54-2122E	OPEN	CLOSE	DISCONNECTOR	
54-2124E	IN	OUT		PROTECTION
54-2127E	OFF	ON	SLEEP MODE	
54-2128E	OFF	ON	±BF SUPPLY	
54-2131E	OUT	IN	OUT/IN SEL.	
54-2132E	RUN	TEST		
54-2134E	OFF	ON	SCADA SEL.	
54-2135E	ON	OFF		
54-2136E	TEST	RUN		
54-2137E	TR	N		
54-2138E	OFF	ON	OFF/ON Switch	
54-2140E	LOCAL	REMOTE		COOLER FAN
54-2141E	IN	OUT	PROTECTION IN/OUT	

Nameplate No.	1	2	3	N1
54-225	絶縁試験		通 常	絶縁試験スイッチ
54-228	入		切	ブレーキ軸割合
54-2110	開 放		平 常	開放スイッチ
54-2111		入 換	S	ATS切換
54-2151	解 放		定 位	開放スイッチ

Nameplate No.	3	5	N1	N2
54-299E	C.R	E.C.C	C.R/ECC SEL	
54-2106E	IN	OUT		BUSBAR PROTECTION
54-2107E	IN	OUT		BREAKER FAILURE PROTECTION
54-2108E	IN	OUT		BUSBAR PROTECTION ZONE
54-2109E	IN	OUT		MECHANICAL PROTECTION
54-2120E	AUTO	MANUAL		BUSBAR PROTECTION ZONE
54-2121E	MASTER	FOLLOWER		MECHANICAL PROTECTION
54-2123E	PAR.	INDEP.		PARALLEL INDEPENDENT
54-2126E	REMOTE	SUP.		
54-2130E	IN	OUT		BB PROTECTION IN/OUT

For 3 notches

Nameplate No.	2	3	4	N1	Japanese
54-300	閉	停止	開		
54-305	切	自動	手動		
54-350	手動	切	自動	切換スイッチ	
54-360	整流器	蓄電池	保証負荷	直流電圧計切換機	
54-373	減	電圧	増	電圧設定	
54-374	R	S	T	電流計	
54-375	R-S	S-T	T-R	電圧計	
54-378	直送	出力	インバータ	交流電圧計切換機	

For 4 notches

Nameplate No.	1	2	3	4	N1	Japanese
54-490	O	R-S	S-T	T-R	電圧計	
54-492	O	R-N	N-T	T-R	電圧計	
54-495	O	R	S	T	電流計	
54-496	O	R	N	T	電流計	

Nameplate No.	1	3	5	7	N1	Japanese
54-752	T	O	R	S	電圧計	
54-753	T-R	O	R-S	S-T	電圧計	
54-755	T	O	R	S	電流計	
54-760	T	O	R	N	電流計	

For 5 notches

Nameplate No.	1	2	3	4	5	N1	Japanese
54-555	O	R	S	T	O	電流計	
54-556	O	R	S	T	N	電流計	
54-557	O	R-S	S-T	T-R	O	電圧計	
54-558	O	R	S	T	O	電圧計	
54-560	OFF	R-S	S-T	T-R	OFF	電圧計	
54-564	0	1	2	3	0	電流計	
54-565	0	1-2	2-3	3-1	0	電圧計	
54-575	OFF	R-N	N-T	T-R	OFF	電圧計	

For 8 notches

Nameplate No.	1	2	3	4	5	6	7	8	N1	Japanese
54-800	S	T	切	R	S	T	切	R		
54-801	ST	TR	切	RS	ST	TR	切	RS		
54-850	S-N	R-N	O	R-S	S-T	T-R	O	T-N	電圧計	
54-856	切	N	切	R	切	S	切	T		

Nameplate No.	1	2	3	4	5	6	7	8	N1	English
54-850E	S-N	R-N	OFF	R-S	S-T	T-R	OFF	T-N	VOLTMETER	
54-855E	Y-N	R-N	OFF	R-Y	Y-B	R-B		B-N	VOLTMETER SELECTOR	
54-860E	ESL2		REMOTE	CB1	89DS1	89DS2	REMOTE	ESL1		

Nameplate No.	2	3	4	N1	English
54-339E	OPEN	NEUTRAL	CLOSE		
54-340E	FWD	STOP	REV		
54-342E	DOWN	STOP	UP		
54-343E	LOCAL	OFF	REMOTE		
54-389E	MASTER	SOLO	FOLLOWER	TAP CHANGER CONTROL	
54-391E	RAISE	OFF	LOWER	TAP CHANGER CONTROL	
54-396E	TRIP	NEUTRAL	CLOSE		
54-398E	OPEN	OFF	CLOSE		
54-3105E	REMOTE	OFF	LOCAL		

Nameplate No.	1	2	3	4	N1	English
54-490E	O	R-S	S-T	T-R	VOLTMETER	
54-495E	O	R	S	T	AMMETER	
54-498E	OPEN		NEUTRAL	CLOSE	BREAKER CONTROL	
54-499E	LOCAL	OFF	OSAS	SCADA		

Nameplate No.	1	3	5	7	N1	English
54-753E	T-R	O	R-S	S-T	VOLTMETER	
54-755E	T	OFF	R	S	AMMETER	
54-767E	B	OFF	R	Y	AMMETER SELECTOR	

Nameplate No.	1	2	3	4	5	N1	English
54-555E	OFF	R	S	T	OFF	AMMETER	
54-556E	O	R	S	T	N	AMMETER	
54-557E	OFF	R-S	S-T	T-R	OFF	VOLTMETER	
54-572E			UNLOCK		LOCK		




B TYPE, BH TYPE

ACCESSORIES

Nameplate

For indicator window type

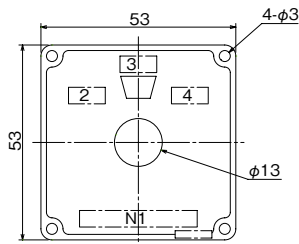


Japanese

Nameplate No.	2	3	4	N1
I54-000	Plain (Outline only)			

English

Nameplate No.	2	3	4	N1
I54-102E			RESET	LOCK-OUT RELAY
I54-235E	TRIP PULL ON LOCK		CLOSE	
I54-236E	OPEN		CLOSE	
I54-252E	OFF		ON	CIRCUIT BREAKER

For key operated type

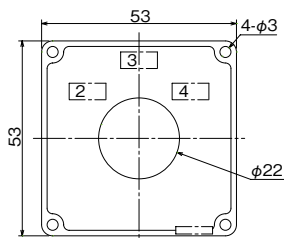


Japanese

Nameplate No.	2	3	4
K54-000			
K54-402	REMOTE		LOCAL
K54-403	JOG	REMOTE	LOCAL
K54-404	TST	N	HS

English


Nameplate No.	2	3	4
K54-229E		NOMAL	BYPASS
K54-236E	OPEN		CLOSE
K54-401E			De-interlock

For BHS type

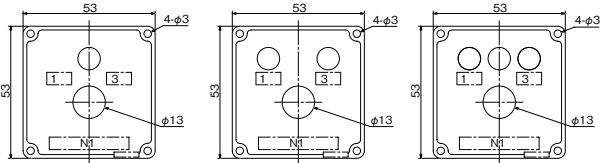

Japanese					
Nameplate No.	1	3	N	Remark	
P54-000	Plain (Outline only)			1 lamp	
				2 lamps	
				3 lamps	
P54-201	切		入	しゃ断器	2 lamps
P54-202	切		入	断路器	2 lamps
P54-203	切		入	遮断器	2 lamps

For handle removal type

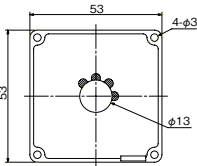

* For handle removal type, please check the removal positions below.

Removal position	B	A	T	F
Removal position	B, A	A, T	B, T	B, A, T



B TYPE, BH TYPE

TECHNICAL DATA

Breaking and making current capacity


Type	AC			DC		
	Test voltage (V)	Test current (A)	Load condition	Test voltage (V)	Test current (A)	Load condition
B, BH, BHL	121	165	Power factor: Pf = 0.6 to 0.7	26.4	11	Time constant: L / R = 40±6ms
	242	110		52.8	6.6	
	484	33		121	1.65	
	—	—		242	0.88	
	—	—		—	—	

Breaking / making circuit current capacity test

To conduct the opened / closed circuit current capacity test, connect the reactor or inductance, which is connected in series to a resistor, to the switch as illustrated in Fig. 1 or 2. Using the test current specified in Table 1, perform CO 50 times for AC and 20 times for DC at intervals of 10 seconds when the voltage is 1.1 times the rated operating voltage of the switch. At this test, check for:

- (1) Short-circuit between poles or earth fault due to generated arc, or broken or burnt switch.
- (2) Any other harmful fault in use

Note: CO means performing the closing action (C) and then the opening action (O) about 50 ms later. For a switch that has some identical structures used for the same electric potential, select an adjacent contact or a contact that is most likely to lead the arc to the frame and then carry out the test using the circuit shown in Fig. 1.

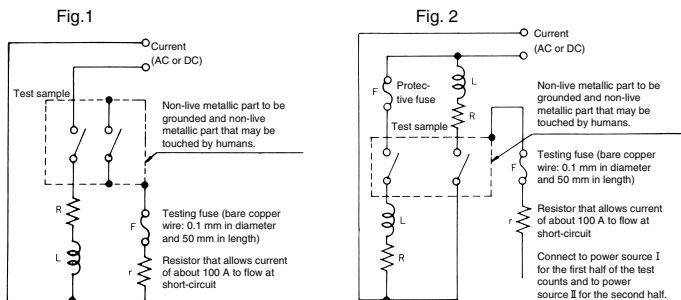

Note: For DC, connect a parallel resistor so that 1% of the test current value flows in parallel with the loads (R-L).

Table 1

AC or DC	Class	Test voltage	Test current		Power factor (AC) or time constant (DC L / R: ms)
			Making	Breaking	
AC	AC11	1.1U _e	11.0 I _e	11.0 I _e	0.6 to 0.7
	AC12	1.1U _e	2.2 I _e	2.2 I _e	0.6 to 0.7
	AC13	1.1U _e	1.1 I _e	1.1 I _e	0.9 to 1.0
DC	DC11	1.1U _e	1.1 I _e	1.1 I _e	100±15
	DC12	1.1U _e	1.1 I _e	1.1 I _e	40±6
	DC13	1.1U _e	1.1 I _e	1.1 I _e	7±1
	DC14	1.1U _e	1.1 I _e	1.1 I _e	1 max.


Note: I_e shows for the rated operating current and U_e shows the rated operating voltage.

Switching speed of lockout relay

(Example: BA-6 8A8B)

Resistance of coil

Voltage	48V DC	100 / 110V DC	125V DC	200 / 220V DC
Resistance	25 Ω	55 Ω	80 Ω	350 Ω

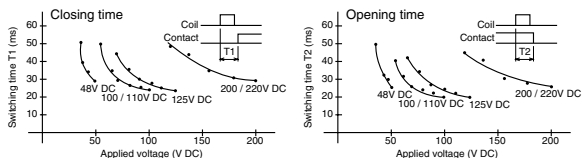

Note: The above voltage values shows the rated values of the coils.

BY type minute electric current switch

- The BY type switch is used to make / break a sequence control current or any other similar low-voltage, minute electric current circuit. It consists of a contact unit that uses twin contacts.
- The BY type switch allows for manufacturing an operation switch that only uses the BY type contact unit. It also allows for manufacturing a switch that incorporates both the BY type contact unit and the standard contact (silver contact) unit (see the right figure).
- * A silver contact and gold contact cannot be combined in a single unit.
- The contact unit of the BY type switch has its housing designed as semitransparency blue, so that it can be discriminated from the standard type.


● The specification and performance are shown in the following table.

Electrical characteristics	Contact spec	Twin contacts
	Contact resistance (mΩ)	50 max.
	Withstand voltage between contacts (V AC)	2,500
	Insulation resistance (Ω)	1,000M
	Max. current carrying capacity (A)	2.0
	Max. breaking voltage (V)*	110 DC / 110 AC
	Max. breaking current (A)*	0.5 DC
	Min. applicable load	5V DC, 1mA
Environmental characteristics	Shock resistance (m/s ²)	50
	Vibration resistance (m/s ²)	2
	Operating temperature (°C)	-20 to 60


* Resistance load

■ Contact protective circuit


If inductive load or load that causes surge current (rush current) to flow (load-carrying capacity, lamp, long cable, or the like) is used as the load for the twin contacts, a contact protective circuit is required and shown below:

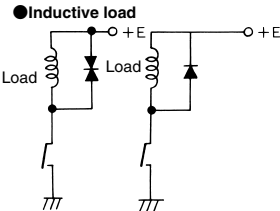

If any electromagnetic relay, solenoid, or counter having an inductance component is used as load, the energy stored in the inductance causes reverse voltage to be generated when the contacts are separated from each other. This reverse voltage reaches even several hundred volt, which can cause remarkable deterioration of the contacts. As a protective circuit, the above method is available.

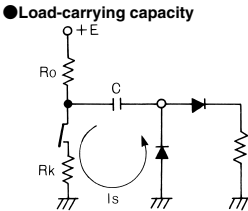


In this case, a capacitor is connected in parallel or in series in a closed circuit including twin contacts. The rush current that flows when the capacitance is charged or discharged can cause remarkable deterioration of the contacts. To prevent this rush current, the above method is generally known and should be used for your reference.

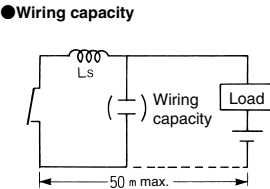

If wiring is carried out at a long distance between the load and twin contacts, the contacts are affected by the capacitance resulting from the cable. Ls differs depending on the load current, but approximately 0.5 to 5 mH is assumed for the circuit.

■ BY type contact unit

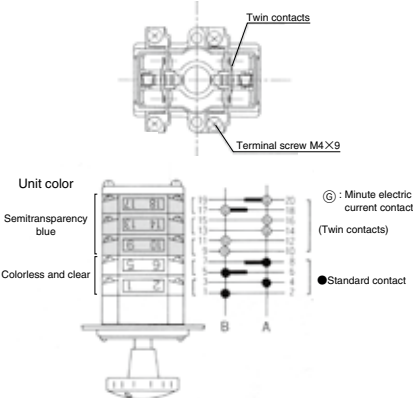

Display example of the above switch:

BY-H5-1B1A1BL1AL2BX2AX1BLX1ALX

- The operating load range is as shown in the following graph. Select a contact type according to your application.

